

B & K MFG. CO.
ADAPTER TC-62 – A & B
For Model 600 Tube Tester

Some NOVAR Based Tubes will require the Plate Cap Lead to be connected to the Terminal on the side of the TC-62-B adaptor. There are no such tubes in the current listing. If the Novar tube has a Plate or Grid Cap on top of the tube, the Cap Lead is connected to it and there is no connection to the adaptor side terminal.

| Tube Type | HTR | A | B | C | Adapter | Socket # |
|------------------|------------|--------------------------------------|----------|----------|----------------|-----------------|
| 5BC3 | 5 | 35 | 6 | 4 | TC-62-A | 3 |
| | | 35 | 6 | 6 | | |
| 6AY3 | 6 | 30 | 5 | 2 | TC-62-B | 8 |
| 6BH3 | 6 | 30 | 5 | 2 | TC-62-B | 8 |
| 6GB5 | 6 | *26 | 4 | 5 | TC-62-B | 8 |
| | | *Normally shows short position 1, 2. | | | | |
| 12AY3 | 12 | 30 | 5 | 2 | TC-62-B | 8 |
| 17AY3 | 17 | 30 | 5 | 2 | TC-62-B | 8 |
| 17BH3 | 17 | 30 | 5 | 2 | TC-62-B | 8 |
| 22BH3 | 22 | 30 | 5 | 2 | TC-62-B | 8 |
| 27GB5 | 27 | *26 | 4 | 5 | TC-62-B | 8 |
| | | *Normally shows short position 1, 2. | | | | |
| 28GB5 | 28 | *26 | 4 | 5 | TC-62-B | 8 |
| | | *Normally shows short position 1, 2. | | | | |
| 7868 | 6 | *27 | 5 | 1 | TC-62-B | 8 |
| | | *Normally shows short position 2-4. | | | | |
| EL500 | 6 | *26 | 4 | 5 | TC-62-B | 8 |
| | | *Normally shows short position 1-2. | | | | |
| PL500 | 28 | *26 | 4 | 5 | TC-62-B | 8 |
| | | *Normally shows short position 1-2. | | | | |