


FUNCTION SELECTOR SWITCH SHOWN IN SWITCH SEQUENCE:
 1 - ALL
 2 - MAIN
 3 - EXT IN
 4 - EXT IN
 5 - EXT IN
 6 - EXT IN
 7 - EXT IN
 8 - EXT IN
 9 - EXT IN
 10 - EXT IN

FUNCTION SELECTOR SWITCH SHOWN IN SWITCH SEQUENCE:
 1 - ALL
 2 - MAIN
 3 - EXT IN
 4 - EXT IN
 5 - EXT IN
 6 - EXT IN
 7 - EXT IN
 8 - EXT IN
 9 - EXT IN
 10 - EXT IN

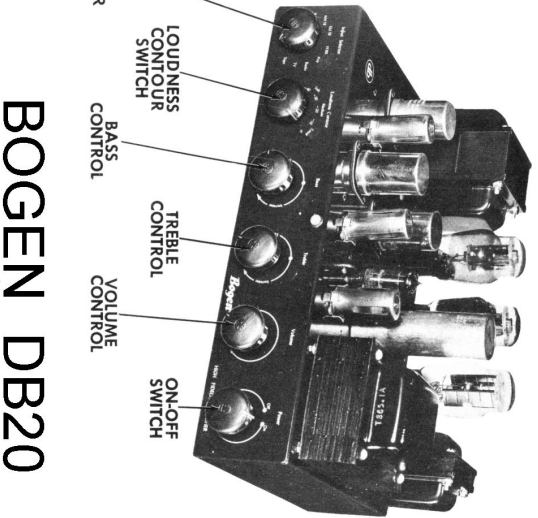

BOGEN DB20

