


ALIGNMENT CHART


Alignment adjustment locations are shown, "CHASSIS, TOP VIEW."

D (See Note 2.)	Tune to Signal	to Loop	Radiated to Loop	1400	ယ
C (See Note 2.)	1620	to Loop	Radiated to Loop	1620	22
A & B (See Note 1.)	1620	High Side of Loop	200 mmf.	455	1
Adjust for Max Output	Position of Dial pointer	То	In Series with	Frequency in KC	Alignment Sequence
		tput	Signal Generator Output	Signal	

ALIGNMENT NOTES

- . Repeat adjustments (A & B) until maximum output is obtained.
- Place signal generator output lead near the loop antenna.

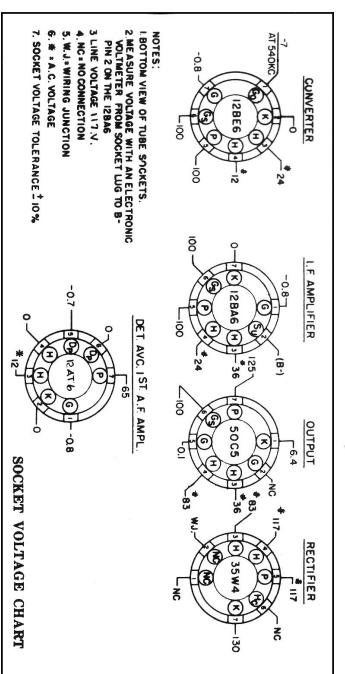

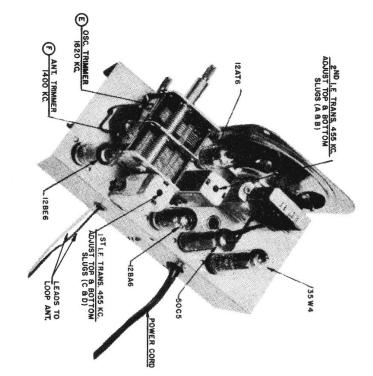

MODELS -11-114U, 11-115U, 11-116U, 11-119U

