

Hum Balancer—It may be found necessary to adjust the Hum Balancer for minimum hum reproduction when a 12AX7 tube is replaced. Set the Bass and Treble Tone Controls in their extreme right hand positions, the Selector Switch in Phono position, turn Loudness Control full on and adjust the Hum Balancer for minimum hum level.