



BOTTOM VIEW

NOTES:

- 1- DENOTES CHASSIS.
- 2- ALL CAPACITORS IN WHOLE NOS ARE IN MMF. THOSE IN DECIMAL NOS IN MF.
- 3- ALL RESISTORS IN OHMS UNLESS OTHERWISE NOTED. "K" = 1000 OHMS.

Fleetwood 41-51 Serenader 5155 Battery Operated Receiver

ALIGNING INSTRUCTIONS:

Connect signal generator to ANTENNA CLIP through a .001 MFD condenser and proceed as follows:

STEP	SET SIGNAL GENERATOR TO:	TURN RECEIVER DIAL TO:	ADJUST THE FOLLOWING for MAXIMUM OUTPUT. KEEP SIGNAL AS LOW AS POSSIBLE.
1	455 KC	Extreme left, condenser plates fully closed.	I.F. Trimmers, starting at I.F. #2 and then I.F. #1 and repeat.
2	1650 KC	Extreme right, condenser plates fully opened.	Oscillator trimmer (Gang condenser front section).
3	1400 KC	1400 KC	RF Trimmer and Antenna trimmer (Gang condenser center and rear section).