


# INSTALLATION AND OPERATING INSTRUCTIONS

## for the **ELECTROHOME** MODEL

**MXA-3**

### FM STEREO RADIO ADAPTER

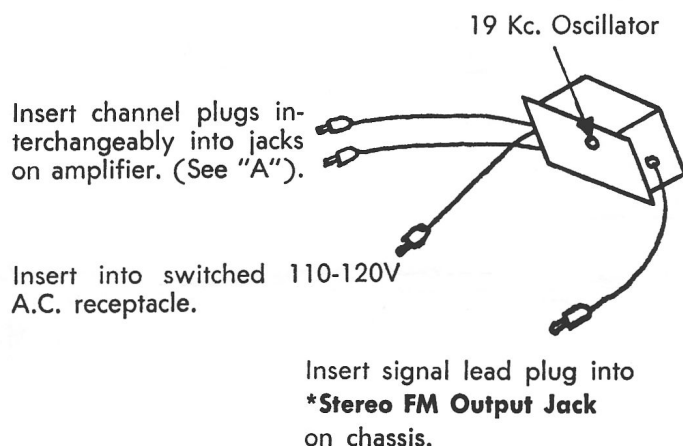

\***STEREO FM OUTPUT JACK** is designated alternatively as "MX", "FMX", "FM-MX" or "Multiplex Output".

1. Locate "Stereo FM Output Jack" on Tuner Platter and Right and Left Input Jacks (See "A") from the Layout Card on the back or inside of cabinet.

#### 2. MOUNTING THE ADAPTER

(a) The adapter should be installed in the area indicated by the mounting label on the cabinet.

(b) In older models of sets where there is no mounting label, the adapter should be carefully mounted away from all sources of heat such as power transformers and output or rectifier tubes.

#### OPERATION

Check chart for FM Stereo Radio Operation of specific models. Set Selector Switch or Pushbuttons as shown under "Operation" in chart.

Selector switch or pushbuttons must be set to Stereo for FM Stereo Radio Operation. Tune in FM Stereo station and operate Level, Balance, Reverse and Tone Controls the same as for stereophonic reproduction of phonograph records.

#### NOTE

If the adapter is to be mounted vertically we recommend that it be mounted with the single brown lead at the bottom. This helps to dissipate the heat generated by the tubes and the power transformer in the unit.

---

## **Dominion Electrohome Industries Ltd.**

KITCHENER - ONTARIO - CANADA



## GROUP - 1

MODEL	"A" INPUT JACKS ON AMPLIFIER	OPERATION
Calais	Left and Right FMX	Set Selector Switch to "FMX" and tune to desired station. "AFC" may be used to compensate for inaccurate tuning.
Caprice FM MK-I	Left and Right FMX	Set Selector Switch to "FMX" and tune to desired station. This position automatically incorporates A.F.C. compensation for inaccurate tuning.
Castanet MK-I Castanet MK-IC	MX Input MX Input	Set Selector Switch to "S/T-R" and tune to desired station. This position automatically incorporates A.F.C. compensation for inaccurate tuning.
Cathedral Classic MK-I	Left and Right Input from Multiplex Adapter "	Set Selector on Tuner to "FM" or to incorporate AFC facility to "FM AFC". Set Selector on Preamplifier to "FMX" and tune to desired station.
Concord MK-V Conestoga	MX Input Left and Right FMX	Depress "MX" pushbutton and tune to desired station. "AFC" may be used to compensate for inaccurate tuning.
Cosmopolitan	Left and Right Input from Multiplex Adapter	Set Selector on Tuner to "FM", to incorporate AFC facility to "FM AFC". Set Selector Switch on Preamplifier to "FMX" and tune to desired station.
Courtleigh Courtleigh MK-I	Left and Right MX MX Input	Set Radio Selector Switch to "FMX" and tune to desired station. This position automatically incorporates AFC compensation for inaccurate tuning.
Crescendo Imperial MK-1	Left and Right Input from Multiplex Adapter	Set Selector on tuner to "FM" or to incorporate AFC facility to "FM AFC". Set Selector Switch on Preamplifier to FMX and tune to desired station.
Glenwood FM	Left and Right MX	Set Selector Switch to "FMX" and tune to desired station. This position automatically incorporates AFC compensation for inaccurate tuning.
Kalmar	Left and Right FMX	Depress "MX" pushbutton and tune to desired station. "AFC" may be used to compensate for inaccurate tuning.
Lucerne Madeira	Left and Right FMX Left and Right FMX	Set Selector Switch to "FMX" and tune to desired station. "AFC" may be used to compensate for inaccurate tuning.
Milano FM	MX (L) and MX (R)	Set Selector Switch to "FMX" and tune to desired station. This position automatically incorporates AFC compensation for inaccurate tuning.
Monterrey Pavanne FM Roxborough	MX Input Left and Right FMX Left and Right FMX	Depress "MX" pushbutton and tune to desired station. "AFC" may be used to compensate for inaccurate tuning. Roxborough - pushbuttons on radio chassis.
Selkirk FM Selkirk 23 F.M.	MX (L) and MX (R) MX (L) and MX (R)	Set Selector Switch to "FMX" and tune to desired station. This position automatically incorporates AFC compensation for inaccurate tuning.
Tuscany Versailles HFT-401S 710	MX Input MX Input J3 and J4 Adjacent to tuner platter. "	Depress "MX" pushbutton and tune to desired station. "AFC" may be used to compensate for inaccurate tuning.

## GROUP - 2

MODEL	"A" INPUT JACKS ON AMPLIFIER	OPERATION
Acadian 40	J7, J8 FMX	Depress "MX" Pushbutton and tune to desired station. "AFC" may be used to compensate for inaccurate tuning.
Kalmar 40	J7, J8 FMX	
Lorraine 40	J7, J8 FMX	
Marseilles	Left and Right FMX	
Sierra	Left and Right FMX	
Sierra MK-I	Left and Right FMX	

## GROUP - 3

MODEL	"A" INPUT JACKS ON AMPLIFIER	OPERATION
Amberley	MX Input	Set Radio Selector Switch to "S/TR" and tune to desired station.
Belfontaine	MX Input	
Camille & -1	MX Input	Set Selector Switch to "FMX" and tune to desired station.
Castanet	Left and Right MX	
Cordella & -1	MX Input	Set Selector Switch to "S/TR" and tune to desired station.
Manhattan	J2, J3 MX IN	Set Selector Switch to "FMX" and tune to desired station.
Mandalay	Left and Right MX	
C202, C202W		
TC201		
Cascade		Set Selector Switch to "S/TR" and tune to desired station.