



NOTE A—When adjusting the I.F. padders the high side of the signal generator is connected through a .1 mfd. condenser to the cap of the 1A7EG tube. The ground side of the signal generator is connected to the ground lead of the receiver.

NOTE B—DIAL CALIBRATION—Before adjusting the R.F. padders the dial must be aligned to track properly with the tuning condenser. To adjust the dial proceed as follows. With the tuning condenser in closed position (max. capacity), set the dial pointer just to the left of the 540 K.C. mark.

NOTE C—When aligning the R.F. padders, the high side of the signal generator is connected through a 200 mmfd. condenser to the antenna lead of the receiver. The ground lead of the generator is connected to the ground lead of the receiver.

NOTE D—Pad for maximum output.

