

(2)-WAVE TRAP-Replace grid clip on cap of 6A7 tube and connect antenna lead from signal generator to antenna post on set. Set signal generator at 460 K. C. and adjust wave trap 1 so as to get MINIMUM reading in output meter.

(3)—ANT. and OSC. H. F.—These adjustments 7 and in are located on top of the tuning condenser assembly at right (facing front of set) and adjusted from above. The "ANT" 7 is nearest front of set. Set signal generator at 1700 and dial of set at 1700 and adjust these two condensers to get maximum output meter reading.


(4)—OSC. L. F. -This condenser 13 is located underneath and is reached from underneath. Set dial chassis of set and signal generator switch at 600, and adjust for

DATA SHEET

Model.359 1934-35 IF.460kc

Rect

Det Osc

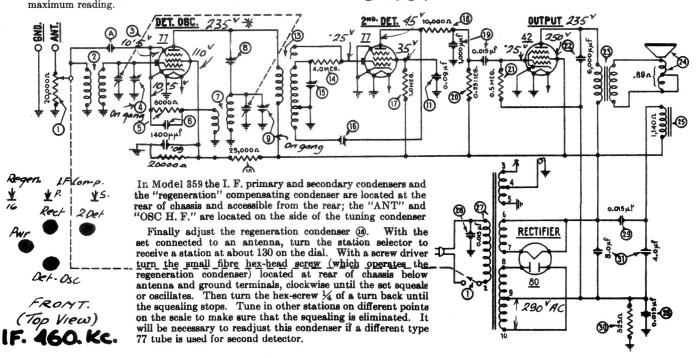

PRINTED IN CANADA