



SWITCH SHOWN IN EXTREME COUNTER CLOCKWISE PHONO POSITION
 SEQUENCE: PHONO, B.C., S.W. MOVING FROM BOTTOM TO TOP.

INT. FREQ. 455 K.C.

WIRING ON SPEAKER SIDE OF
 PLUG SHOWN IN DOTTED LINES

Phonola - Electrohome 1T52-E, Z1T52-E, 1T52-E-1, Z1T52-E-1

Phonola - Electrohome 1T52-E, Z1T52-E, 1T52-E-1, Z1T52-E-1

ALIGNMENT—PROCEED IN SEQUENCE LISTED.

Band	Band Switch Setting	Dummy Antenna	Connect Generator To	Radio Dial Setting	Generator Frequency	Trimmer Adjusted	Adjustment
2nd I.F.	B.C.	1. Mfd.	Grid of 12SK7 I.F. Tube	1700 K.C.	455 K.C.	2nd I.F. C-9	Maximum Output
1st I.F.	B.C.	1. Mfd.	Grid of 12SA7 Converter	1700 K.C.	455 K.C.	1st I.F. C-8	Maximum Output
1460 K.C.	B.C.	200 Mmfd.	Antenna	1460 K.C.	1460 K.C.	B.C. Osc. C-6 B.C. Ant. C-4	Maximum Output
600 K.C.	B.C.	200 Mmfd.	Antenna	600 K.C.	600 K.C.		Maximum Output
15 M.C.	S.W.	400 Ohm	Antenna	15 M.C.	15 M.C.	S.W. Osc. C-5 S.W. Ant. C-3	Maximum Output
6 M.C.	S.W.	400 Ohm	Antenna	6 M.C.	6 M.C.	None	None

