





AUTOMATIC RECORD PLAYER

# MODEL VE-30A

SERVICE DATA


— 1953 No. 10 —

HOME INSTRUMENT SERVICE DIVISION RCA VICTOR COMPANY, LTD. MONTREAL, QUE.

### ELECTRICAL AND MECHANICAL SPECIFICATIONS

Tube Complement	Dimensions (overall)
1. RCA 12SQ7       A.F. Amplifier         2. RCA 50L6-GT       Output         3. RCA 35W4       Rectifier	Height 10 % '' Width 13 % '' Depth 13 1/2 ''
3. RCA 35W4 Rectifier	Weight
Power Supply Rating	Net weight
115 volts, 60 cycles A.C50 watts	Record Changer (124196 Series)
Loudspeaker	Turntable speed
Size and type	Record capacity Up to fourteen 7 inch RCA type or twelve 10 inch. or ten 12 inch.
Power Output	or ten 10 in. and 12 in. intermixed.
Undistorted1.2 watts Maximum1.5 watts	Pickup (Stock No. 75475)Crystal with replaceable styli.

REPLACEMENT PARTS FOR MODEL VE-30A				
STOCK No.	DESCRIPTION	STOCK No.	DESCRIPTION	
*S-20071  75562 *S-20068	AMPLIFIER ASSEMBLIES  Capacitor—Electrolytic comprising one section of 50 mfd., 150 volts and one section of 80 mfd., 150 volts	*S-20069 *S-20067 *S-20066 S-20029 *S-20070 76787 (*) Indica	SPEAKER ASSEMBLY  Speaker—4" x 6" P.M. Speaker complete with cone and voice coil (3.2 ohms)  MISCELLANEOUS ASSEMBLY  Cabinet - Plastic cabinet - Maroon Cloth - Grille cloth	

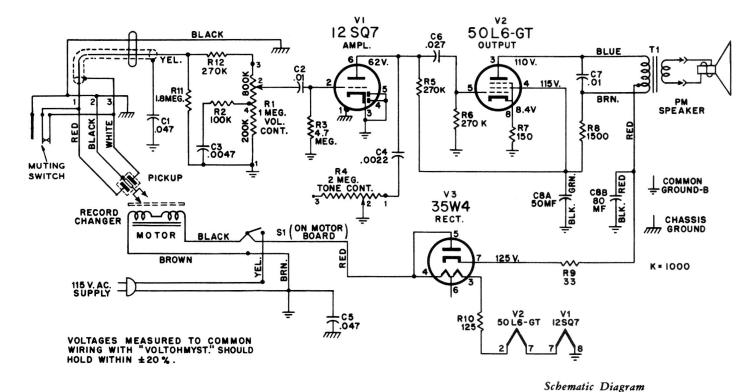

115 V. A.C. INPUT AUDIO INPUT FROM RECORD CHANGER 50L661 35W4 TONE POWER & SWITCH LEADS TO RECORD CHANGER VOLUME

Amplifier Top View

1. Dress R<sub>3</sub> down next to chassis. 2. Dress all leads away from R9 and R10. 3. Dress power cord and other A.C. leads down

next to chassis.

### Connect C<sub>2</sub> and C<sub>4</sub> with short leads. 5. Dress electrolytic capacitor leads away from audio input circuit.

CRITICAL LEAD DRESS

## FOR RECORD CHANGER SERVICE INFORMATION-REFER TO 124196 SERIES SERVICE DATA


### **CONTROLS**

The record changer has a dual control on the motorboard and a stylus selector control on the pickup arm. The inner control (circular knob) is the OFF-ON-REJECT control. Turning this knob to the center position energizes the motor and starts the turntable, when turned to the right (clockwise) it starts the mechanism into complete automatic operation. The mechanism will shut off automatically after the last record has been played but can be shut off manually by turning this knob to the left (counter-clockwise).

The outer control (double ended lever) is the speed control. It has three positions; "33", "45", "78", to select the turntable speed desired.

The stylus control has two normal positions (right and left) and one shipping position (lever pointing up). When playing 331/3 or 45 r.p.m. records the lever is turned so that "33-45" is visible on the TOP of the lever; likewise for 78 r.p.m. records "78" should be visible on the TOP.

The removable centerpost is for use with 45 r.p.m. records having the large centerhole. It must be placed over the center spindle with the "RCA" trademark monogram FACING to the FRONT. When not in use it is placed in a well at the front of the motorboard.

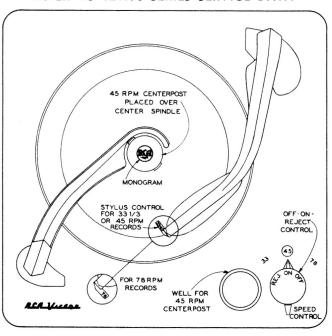

Record Changer Controls