
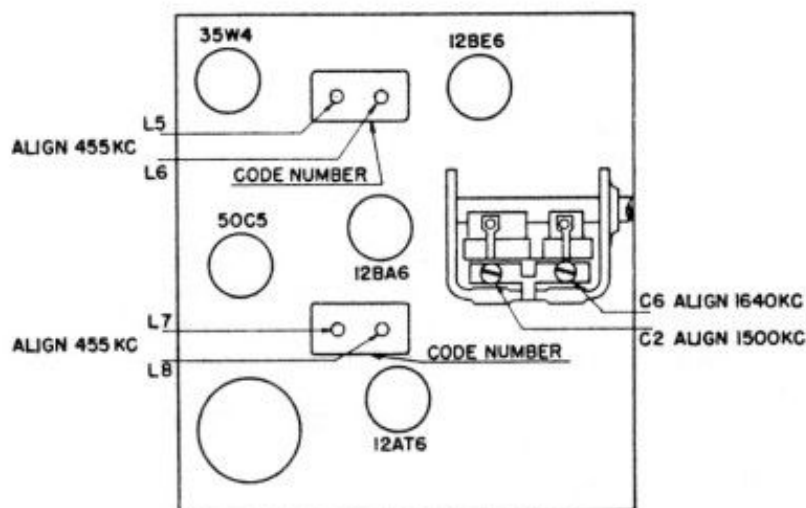


ALIGNMENT CHART

Operation Steps	SIGNAL GENERATOR		RECEIVER	
	Connections to Receiver	Frequency	Tuning Capacitor	Adjust in Stated Order for Maximum Output
1	To stator plates of gang C2 through 0.05 mf capacitor	455 Kc	Minimum	I. F. Transf. L7-L8-L5-L6
2	To Blue Lead on Antenna Rod through 200 mmf capacitor in series with a standard dummy *.	1640 Kc.	Minimum	Oscillator Trimmer C6
3	To Blue Lead on Antenna Rod through 200 mmf capacitor in series with a standard dummy* .	1500 Kc.	Tune in 1500 Kc.	Antenna Trimmer C2

* or direct output of generator in series with a 100 μ F capacitor.

ROGERS MAJESTIC 170 & 570

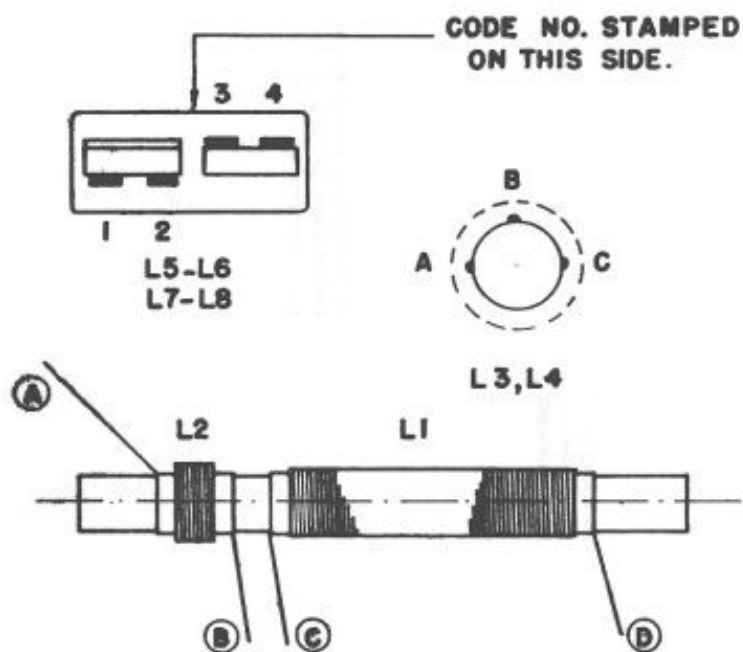

ROGERS MAJESTIC 170, 570 PHILIPS 172, 572