



## ADJUSTMENTS

### SHERWOOD SMX-A, SMX-B, SMX-S

**SPLIT CHANNEL STEREO**  
Place the Circuit Selector switch in SPLIT position, Balance control in FM position and then rotate clockwise to MX. Adjust sound level with the MX Level control until equal sound output is heard as the Balance control is switched between FM and MX. Turn Balance control to Stereo. Further balancing of the program can be done by moving the Balance control to the right or left from the Stereo position.

**CROSBY SYSTEM STEREO**  
Place the Circuit switch in CROSBY position, Balance control to FM and then rotate clockwise to MX. Adjust

the sound level with the MX Level control until equal sound output is heard as Balance control is switched between FM and MX. Rotate Balance control to Stereo. The Balance control will now serve as the Demonstration control. Rotation toward MX will result in greater separation and rotation toward FM will provide less separation.

