


Sparton 5651 Battery Operated Receiver

Sparton 5651 Battery Operated Receiver

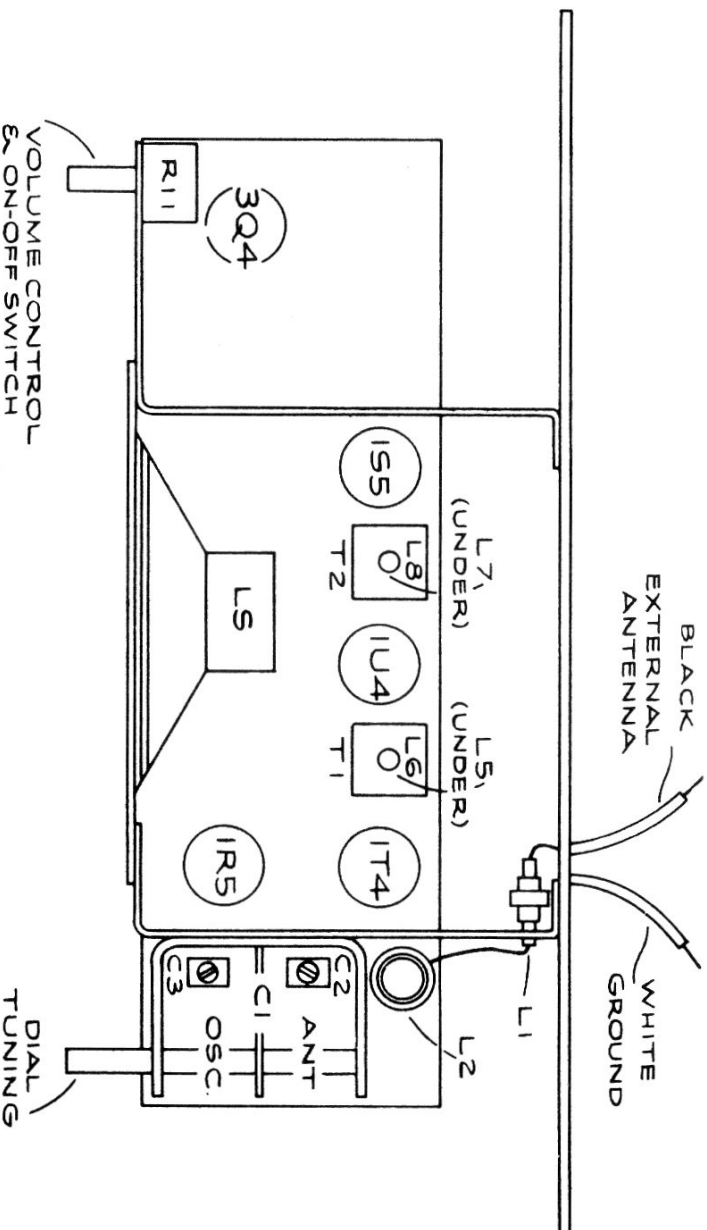

TOP VIEW OF CHASSIS

ELECTRICAL ALIGNMENT

- I.F. 455 kcs. Connect signal generator at 455 kcs. (through a .01 mfd. capacitor) to pin 6 of IR5 converter. Adjust T₂ and T₁, for maximum output.
- B/C 1500 kcs. Connect signal generator at 1500 kcs. to antenna and ground terminals. Set dial to 1500 kcs. adjust oscillator trimmer, (C₃) then antenna trimmer (C₂) for maximum output.

COIL CONNECTIONS

