

### Sparton Model 87 Alignment Information

ALIGNMENT INSTRUCTIONS

Due to the arrangement of the R.F. coils in this model, alignment of all R.F. bands is very easily

### I.F. ALIGNMENT

output meter in speaker circuit either across voice coil, or in series with a condenser between one 6F6G plate and ground. (Complete instructions are supplied with vorm across voice coil, or in series with a condenser between one 6F6G instrument). und. (Complete instructions are supplied with your output meter to suit that particular With service oscillator turned on, adjust trimmers C44A and B and C45 A and B for max-

### B.C. OSCILLATOR TRIMMER

to 1500. tuned in. Turn band switch Then, with oscillator output lead to "white" or B.C. attached . Set service oscillator at 1500 K.C. and turn set dial to aerial terminal, adjust trimmer C8 until signal is

### 'n **B.C. OSCILLATOR PADDER**

Set service oscillator at 600 K.C. and turn set dial to 600. Recheck at 1500 as in section one. Adjust padder C11 until signal is tuned

## **B.C. R.F. TRIMMERS**

e

ij.

output. With set tuned to 1500 and oscillator set at that frequency adjust trimmers C2 and C5 for maximum

# "RED" BAND OSCILLATOR TRIMMER

C9 until signal is tuned in. Set service oscillator at 6000 K.C. and turn set dial to 6 on the Red band. Then adjust trimmer

"RED" BAND OSCILLATOR PADDER

ġ

signal is tuned in. Set service oscillator at 2000 K.C. is tuned in. Recheck at 6000 K.C. as in section four. Turn set dial to 2 on the Red band. Adjust padder C12 until

### 6. "RED" BAND R.F. TRIMMERS

C6for maximum output. Set service oscillator at 6000 K.C. and tune set to 6 (on Red band). Then adjust trimmers C3 and

# "BLUE" BAND OSCILLATOR TRIMMER


C10 until signal is tuned in. Set service oscillator at 15000 K.C. and turn set dial to 15 on the Blue band. Then adjust trimmer

## "BLUE" BAND OSCILLATOR PADDER

until signal is tuned in. Set service oscillator at 6000 K.C. and turn set dial to ignal is tuned in. Recheck at 15000 as in section 7. 6 on the Blue band. Adjust padder C13

### 9 "BLUE" BAND R.F. TRIMMERS

C7for maximum output. With service oscillator set at 15000 K.C. and set tuned to that frequency, adjust trimmers C4 and

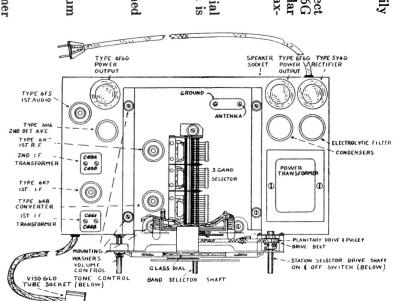

Ö,

BOTTOM VIEW OF 87 SHOWING TRIMMERS PADDERS & COILS

0

R.F. SECTION