


1946-47

No.	Dummy antenna in series with signal generator	Connection of signal generator to receiver	Signal gen. freq.	Receiver dial setting	Trimmer disc.	Type of adjustment
1.	.1 mfd. cond.	Top grid of 1A7G	455 Kc	Any point where it does not affect signal.	1st I.F. 2nd I.F.	Adjust for maximum output and then repeat adjustment.
2.	Standard dummy	Ant. lead	1500 Kc	1500 Kc	On rear section of gang.	Adjust to bring in signal.
3.	Ditto	Ditto	600 Kc	600 Kc	R.F. Coil L2	Adjust iron core for maximum output.
4.	Ditto	Ditto	1500 Kc	1500 Kc	Center and front sections of gang.	Adjust ant. and RF trimmers for max. output while rocking gang.
5.	Ditto	Ditto	1500 Kc	600 Kc	Repeat operation 3	Repeat operation 3
6.	Ditto	Ditto	600 Kc	1500 Kc	Repeat operation 4	Repeat operation 4

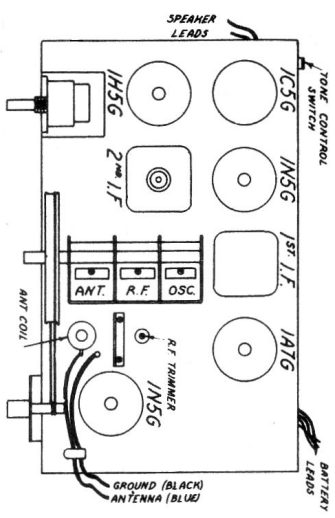

MODEL 519