


# VIKING

## Portable Electric Phonograph

### 4 SPEED 2 TUBE AUTOMATIC

**SPECIFICATIONS:**

Maximum Power Output	1.8 Watts
Power Consumption	33 Va.

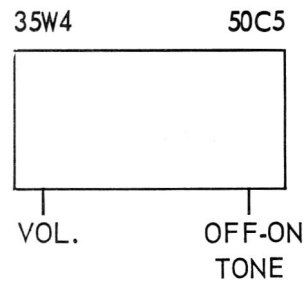

### SERVICE REPLACEMENT PARTS LIST

**FINAL ASSEMBLY**

03-90010-02	BSR UA8 Record Changer
16-250004-02	BSR TC8H Cartridge
16-120017-01	1 mil Sapphire Stylus L.P.
16-120017-02	3 mil Sapphire Stylus 78rpm
13-77-01	Curtain
12-17650-52	Portable Phono Case - Rust & White
13-78-01	Motor Board
19-50003-01	5" PM Speaker
53-40-08	Knob - Loudness
53-40-09	Knob - Off.On-Tone
53-141-01	Viking Nameplate

**CHASSIS ASSEMBLY**

24-80015-02	Output Transformer 6.4ohms
41-19-01	Control - Volume
41-20-01	Control - Tone.Off-On
44-56-01	Triple Electrolytic - 80-30 ufd X 150 volt 40 ufd X 25 volt

### CAUTION FOR SERVICEMEN

Any serviceman working with this unit when it is out of the cabinet should take special care not to come in contact with any ground connections.

When writing for Service Information, please quote model number and serial number. Always order service parts by part number. Part numbers are positive identification which ensures fast service and avoids unnecessary delays. Serial number will be found under turntable mat.

