
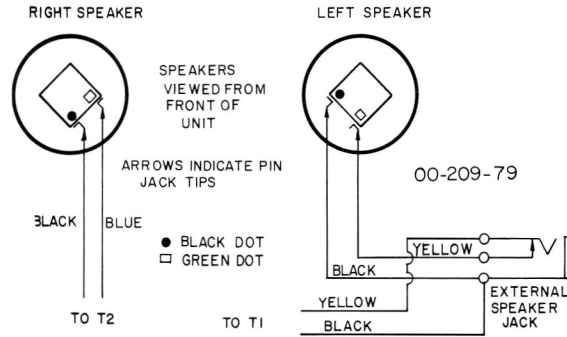


- FOR THE -

VIKING ELECTRIC PHONOGRAPH

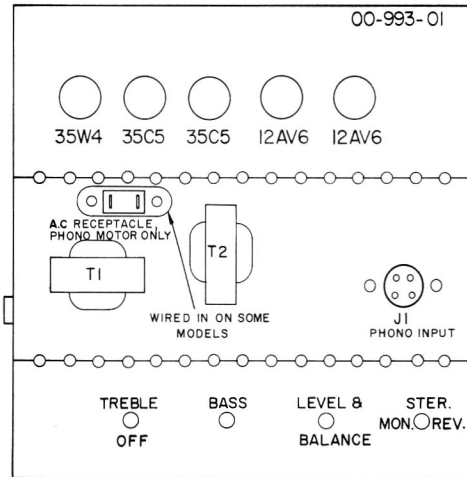

SPECIFICATIONS - Maximum Power Output 3 Watts
Power Consumption 42 Va.

SERVICE REPLACEMENT PARTS LIST

FINAL ASSEMBLY

16-90010-05	BSR UA8 Changer
16-250013-01	BSR TC8S Stereo Cartridge
16-120036-01	BSR TC8RS LP Stylus
16-120017-02	BSR TC8G 78 Stylus
19-60003-01	6" PM Speaker 6.4 ohm
53-102-04	Knob 3 used
53-318-03	Knob 3 used
53-157-03	Knob - rear

CHASSIS ASSEMBLY

24-80015-02	Output Transformer 6.4 ohm
26-47-01	Selector Switch
34-133-06	AC Outlet and Leads
41-122-02	Dual Control - Level Balance
41-121-02	Dual Control - Bass Tone
41-120-02	Dual Control - Treble Tone and Switch

CHASSIS RIVETED

34-77-01	Four Prong Phono Socket
44-74-01	Electrolytic 70, 40 & 30 ufd x 150 Volts

All information printed in this leaflet is up to date as of Oct. 14, 1959.

Subsequent changes are covered by bulletin.

CAUTION FOR SERVICEMEN

Any serviceman working with this receiver when it is out of the cabinet should take special care not to come in contact with any ground connections.

When writing for Service Information and/or parts, please quote model and Serial Number as found on the license label. Always order service parts by part number. Part numbers are positive identification which ensures fast service and avoids unnecessary delays.

THE TEATON CO LIMITED
CANADA

