

Service Information and Parts List for

VIKING

Portable Electric Phonograph

PMP-487
PMP-465

MODEL PMP-465 & PMP-487

4 Speed 1 Tube Manual

Undistorted Power Output5 Watts
Maximum Power Output 1.5 Watts
Power Consumption 30 VA.
Tube 25EH5

For Operation on 110 - 120 Volts A.C. Cycle as Marked.

REPLACEMENT PARTS LIST

FINAL ASSEMBLY

12-19332-51	Portable Phono Case - Blue and White (PMP-465)
12-19332-52	Portable Phono Case - Charcoal and Grey (PMP-465)
12-19334-51	Portable Phono Case - Blue and White (PMP-487)
12-19334-52	Portable Phono Case - Charcoal and Grey (PMP-487)
13-130-01	Motorboard (PMP-465)
13-130-02	Motorboard (PMP-487)
16-120005-03	Arm Rest B.P.
16-120034-05	Pickup Arm and Cartridge Assembly
16-120023-01	Turntable with Clip
16-210003-01	Motor - 4 Speed BSR TU9
19-40005-01	Speaker 4" PM 3.2 ohm VC
53-40-10	Knob (PMP-465)
53-40-18	Knob (Tone) (PMP-487)
53-40-17	Knob (Off-Volume) (PMP-487)

CHASSIS ASSEMBLY

34-139-08	Line Cord & Plug Assembly
R1 41-14-01	Volume Control 1M Off-On
R2 41-15-01	Tone Control 25K (PMP-487 only)
T1 24-80036-02	Output Transformer 40 ohm VC
SR1 28-1-02	Rectifier - Selenium 65 ma.
C2 44-6-10	Electrolytic Triple 10Mfd. x 25V, 80,30Mfd. x 150V

CAUTION FOR SERVICEMEN

Any serviceman working with this unit when it is out of the cabinet should take special care not to come in contact with any ground connections.

When writing for Service Information, please quote model number and serial number. Always order service parts by part number. Part numbers are positive identification which ensures fast service and avoids unnecessary delays.

THE T. EATON CO. LIMITED
CANADA



