

Service Information and Parts List for

VIKING

FOUR SPEED MANUAL MONAURAL

PORTABLE ELECTRIC PHONOGRAPH

Undistorted Power Output5 Watts
 Maximum Power Output 1.5 Watts
 Power Consumption26A
 Tube 25EH5

For Operation on 110 - 120 Volts A.C. Cycle as Marked.

REPLACEMENT PARTS LIST

FINAL ASSEMBLY

12-25480-51	Portable Phonograph Case - Grey & Blue
12-25480-52	Portable Phonograph Case - Brown & Tan
13-208-03	Motorboard
16-120005-03	Tone Arm Rest (on brown case)
16-120005-02	Tone Arm Rest (on blue case)
16-120034-09	Astatic KR 146 Tone arm & Mtg. Hardware
16-250031-03	Astatic 146 Cartridge
16-120057-01	Turntable
16-120064-05	Replacement Styli - Astatic N62
16-210005-01	BSR TU12 Manual Player - 60 cycle
19-40017-05	Speaker - 4" PM 4 ohm VC
53-748-09	Knob - Volume (on brown case)
53-748-10	Knob - Tone (on brown case)
53-748-05	Knob - Volume (on blue case)
53-748-06	Knob - Tone (on blue case)

CHASSIS ASSEMBLY

Symbol	Part no.	Description
R1, SW1	41-215-02	Control - Volume (1M) and AC Switch
R2	41-215-04	Control - Tone - 25K
T1	24-80046-01	Audio Output Transformer
	28-1-02	Silicon Rectifier - 65 MA
	44-81-01	Electrolytic - 80 50 ufd 150 V

All information in this leaflet is up to date as of January 7, 1966. Subsequent changes covered by bulletin.


CAUTION FOR SERVICEMEN

Any serviceman working with this chassis when it is out of the cabinet should take special care not to come in contact with any ground connections.

When writing for Service Information, please quote model number and serial number. Always order by part number. Part numbers are positive identification which ensures fast service and correct replacement. When writing for installation items please quote cabinet finish colour.

EATON'S OF CANADA



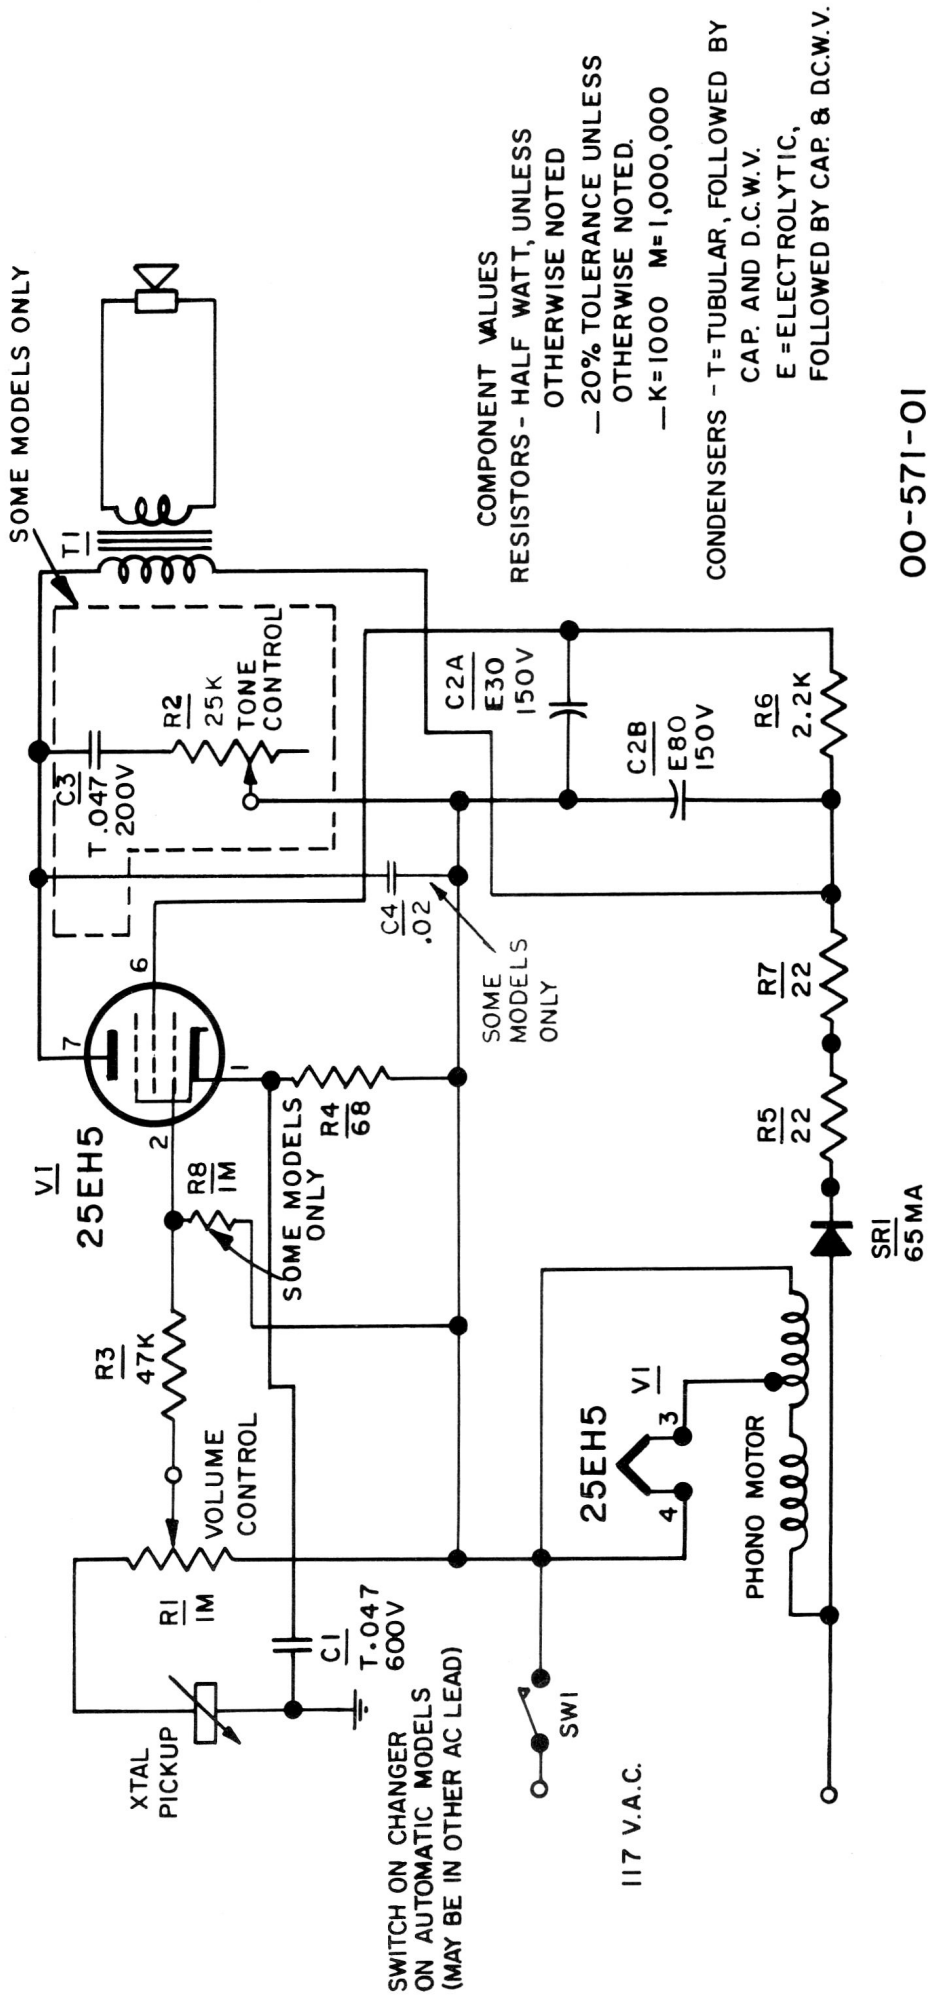

00-571-01
Issue 7