



VIKING RMK-316, RM-318, RM-318R

ALIGNMENT AND SENSITIVITY

STEP	APPLY SIGNAL		THRU SERIES TUNING	SET GANG AT	ADJUST FOR MAX. OUTPUT		NOMINAL SENSITIVITY
	KC.	TO					
1	455	12BAG ^{#1}	.05 μ f.d.	MIN. CAP.		2ND. I. F.	2000 μ V.
2	455	12BEG ^{#7}	.05 μ f.d.	MIN. CAP.		1ST. I. F.	65 μ V.
3	1460	*ANT.	—	1460		OSC. TRIMMER	—
4	1460	*ANT.	—	1460		ANT. TRIMMER	275 μ V./M.
5	535	*ANT.	—	MAX. CAP.		CHECK ONLY	—
6	600	*ANT.	—	600		CHECK ONLY	475 μ V./M.

* FASHION LOOP CONSISTING OF SEVERAL TURNS OF WIRE AND RADIATE SIGNAL, FROM GENERATOR TO LOOP OF RECEIVER.

VIKING RMK-316, RM-318, RM-318R