


ALIGNMENT CHART

Alignment adjustment locations are shown "CHASSIS, TOP VIEW."

Alignment Sequence	Signal Generator Output		Position of Dial Pointer	Adjust for Maximum Output
	Frequency in kc.	In Series with		
1	455	200 mmf.	External Ant. Screw	* A, B, C & D
2	1620	200 mmf.	External Ant. Screw	E
3	1400	200 mmf.	External Ant. Screw	F

* Repeat adjustments until maximum output is obtained.

CROSLEY MODELS 10-135, 10-136E, 10-137, 10-138, 10-139, 10-140

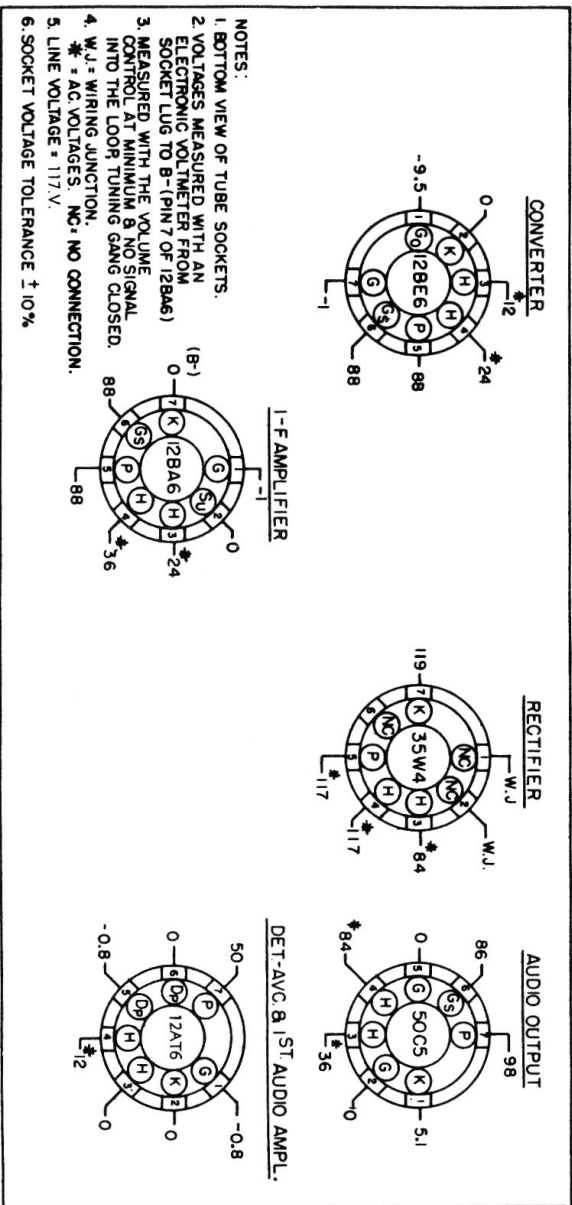

- NOTES:
1. BOTTOM VIEW OF TUBE SOCKETS.
 2. VOLTAGES MEASURED WITH AN ELECTRONIC VOLTMETER FROM SOCKET LUG TO B--(PIN 7 OF 12BA6)
 3. MEASURED WITH THE VOLUME CONTROL AT MINIMUM & NO SIGNAL INTO THE LOOP TUNING GANG CLOSED.
 4. W.J. = WIRING JUNCTION.
 5. * = AC VOLTAGES. NC = NO CONNECTION.
 6. SOCKET VOLTAGE TOLERANCE ±10%.

