


WINDING POLARITY
 "S" DESIGNATES START OF WINDING
 "F" DESIGNATES FINISH OF WINDING

NOTE #1:
 WHEN A 2 VOLT WET BATTERY
 IS USED POINTS "A" & "B"
 ARE SHORTED.
 ALL VOLTAGES MEASURED TO CHASSIS BASE.

Alignment Phonola Data Sheet 89:
 "ELECTROPHONE 8XXX & Z8XXX RADIO ALIGNMENT DATA"

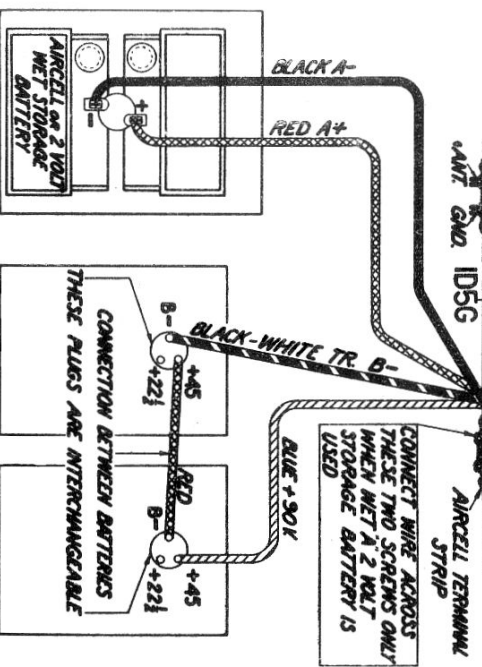

CONNECT WIRE ACROSS
 THESE TWO SCREWS ONLY
 WHEN MET A 2 VOLT
 STORAGE BATTERY IS
 USED

CONNECTION BETWEEN BATTERIES
 THESE PULGS ARE INTERCHANGABLE

Phonola

Electrohome 8B61-M & 8B61-M-1

Battery Operated Radio