
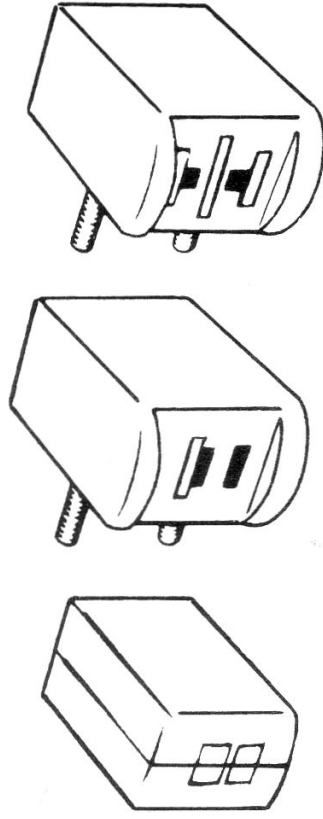


DIRECTIONS FOR CLEANING HEADS

After your recorder has been played a number of times it is possible in some cases that oxide from the tape may accumulate on the erase and play pole pieces causing poor erase, distortion and low output.

This can very easily be removed by following the few simple directions below.

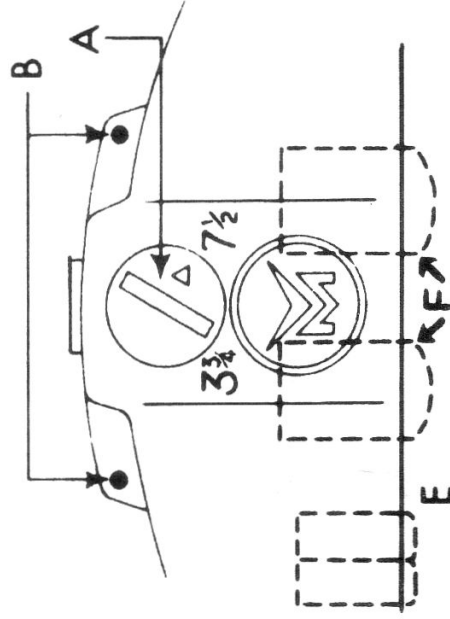

ERASE HEAD (E) RECORD HEADS (F)

1. Press stop button.
2. Remove speed button (A) by grasping with fingers and pulling straight up.
3. Remove two screws (B) and lift cover. This will expose the erase head (E) and record heads (F).
4. Take a small cotton swab. Dip in alcohol and rub surface of head and pole piece. This will remove all the oxide which has accumulated on the heads. Wipe dry.
5. Re-assemble.

