Model 94BT Battery Receiver

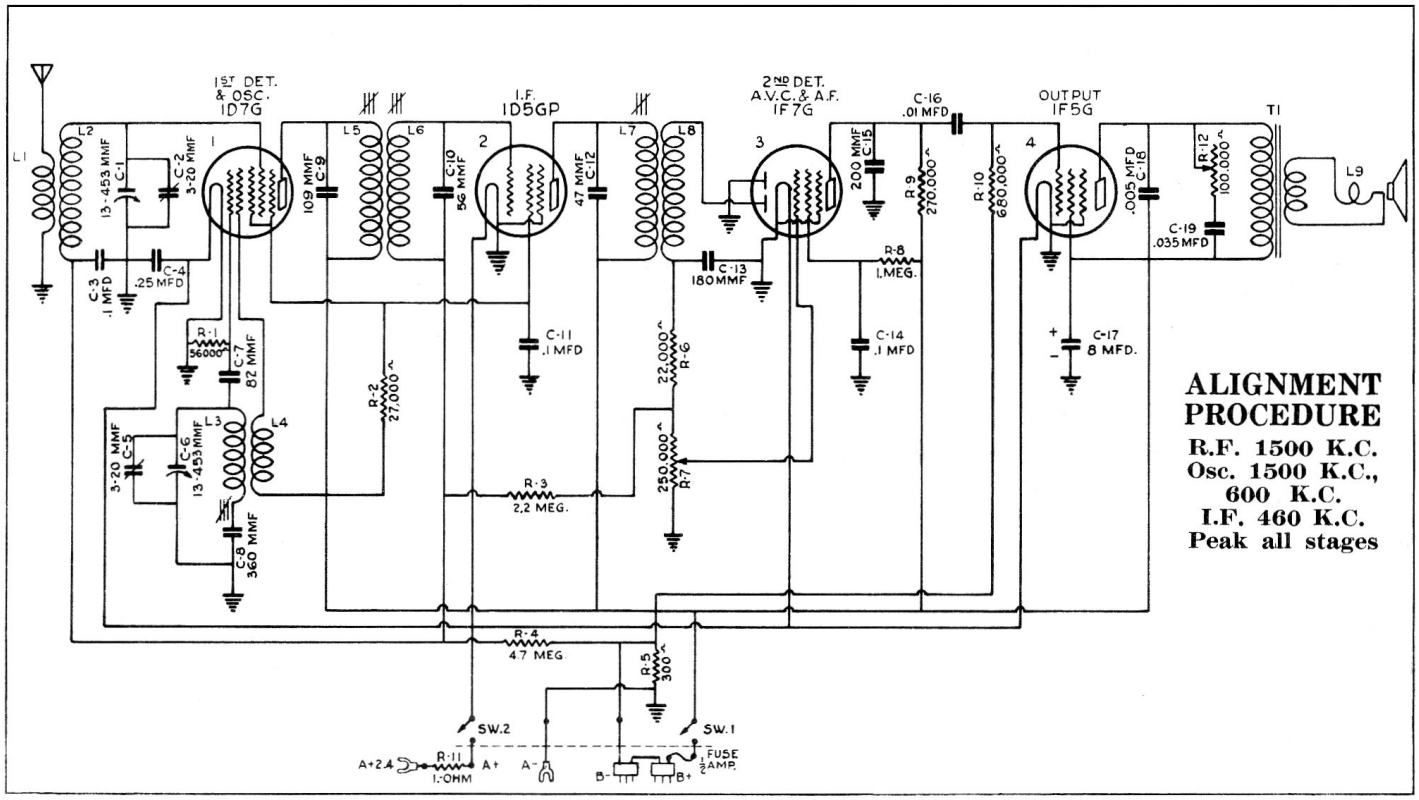

ALIGNMENT PROCEDURE

R.F. 1500 K.C.
Osc. 1500 K.C.,
600 K.C.
I.F. 460 K.C.
Peak all stages

REPLACEMENT PARTS MODEL 94BT

Insist on genuine factory tested parts, which are readily identified and may be purchased from authorized dealers.

STOCK NO.	DESCRIPTION
	RECEIVER ASSEMBLIES
S-2026	Cable - 4 conductor battery cable approx. 60" long, complete with "A" battery clips, flexible resistor, fuse and fuse connector.....
13028	Cap - I.F. transformer shield cap.....
11350	Cap - Grid contact cap -
S-1734	Capacitor - 47 Mmfd. (C-12).....
13307	Capacitor - 56 Mmfd. (C-10).....
12813	Capacitor - 82 Mmfd. (C- 7).....
14262	Capacitor -109 Mmfd. (C- 9).....
14712	Capacitor -180 Mmfd. (C-13).....
30232	Capacitor -200 Mmfd. (C-15).....
13967	Capacitor -360 Mmfd. (C- 8).....
4793	Capacitor - .005 Mfd. (C-18).....
13138	Capacitor - .01 Mfd (C-16).....
5196	Capacitor - .035 Mfd. (C-19).....
4839	Capacitor - .1 Mfd. (C-3,C-11,C-14).
S-1592	Capacitor - .25 Mfd. (C- 4).....
S-2028	Capacitor - 8 Mfd. (C-17).....
S-2029	Coil - Antenna coil (L-1,L-2).....
S-2030	Coil - Oscillator coil (L-3,L-4).....
S-2031	Condenser - 2-gang variable tuning condenser (C-1,C-2,C-5,C-6) .....
12006	Core - Adjustable core and stud for 1st or 2nd I.F. transformer.....
S-2047	Crystal - Celluloid dial scale crystal.
S-2032	Dial - Station selector dial scale and bracket.....
11982	Fastener - Station selector dial scale fastener -
3748	Fuse - ½ ampere fuse.....
6516	Fuse connector complete.....
S-2027	Indicator - Station selector indicator pointer.....
S-2023	Knob - Station selector knob.....
S-2034	Knob - Operating switch and tone control knob.....
14269	Knob - Volume control knob.....
12827	Plug - Battery cable plug.....

STOCK NO.	DESCRIPTION
	RECEIVER ASSEMBLIES (Continued)
S-1692	Resistor - 1 ohm flexible wire wound ballast resistor (R-11).....
S-2035	Resistor - 300 ohms, insulated type ½ watt (R-5).....
S-2046	Resistor - 22,000 ohm, carbon type, 1/10 watt (R-6).....
S-2036	Resistor - 27,000 ohms, insulated type, ½ watt (R-2).....
12286	Resistor - 56,000 ohms, carbon type, ¼ watt (R-1).....
12199	Resistor - 270,000 ohms, carbon type, ¼ watt (R-9).....
S-2037	Resistor - 680,000 ohms, carbon type, ¼ watt (R-10).....
13730	Resistor - 1 Megohm, carbon type, ¼ watt (R-8).....
S-1536	Resistor - 2.2 Megohm, carbon type, ¼ watt..(R-3).....
S-2038	Resistor - 4.7 Megohm, carbon type, ¼ watt (R-4).....
S-2039	Shield - 1D5GP or 1F7G radiotron shield
11196	Socket - Radiotron socket.....
S-2040	Tone control and operating switch (R-12,S-1,S-2).....
14261	Transformer - 1st I.F. transformer (L-5,L-6,C-9,C-10).....
S-2041	Transformer - 2nd I.F. transformer (L-7,L-8,C-12,C-13)(R-6).....
S-2042	Transformer - Output transformer (T-1).
S-2043	Volume control (R-7).....
	REPRODUCER ASSEMBLIES
S-2044	Cap - Dust cap for reproducer cone -
S-2020	Cone - Reproducer cone.....
S-2045	Reproducer - Complete.....