
MAG #1 BLUE
MAG #2 GRN
TUNER
TAPE
TV
MAG 1
MAG 2
M4
MAG 1
MAG 2
PICK-UP SELECTOR
MAG 1-MAG 2 PRE-AMP
V1 12AX7
AF AMP
V2 A 12AX7
HIGH FREQ BIAS RECT
V3 A 6AV6
HIGH FREQ GATE
V4 12AU7
SW ON HIGH FREQ NOISE CONTROL
#2 RECORDER OUTPUT
#1 RECORDER OUTPUT
PLAYBACK
MONITOR
TAPE
LOUDNESS 500K LOUD TAP @ 120K & 300K
VOL
LOUD
VOL
AF AMP
V6 12AU7
R7 LEVEL 500K
M7 SECTION 2 FRONT
M7 SECTION 2 REAR
M7 SECTION 1 FRONT
M7 SECTION 1 REAR
INPUT SELECTOR SWITCH (M7) SHOWN IN "EUR 78" POSITION. SWITCH SEQUENCE:
1. EUR-78
2. ORIG-LON
3. ORIG-AES
4. RIAA-NARTB-ORTHO
5. ORIG-COL.
6. NARTB-TAPE
7. TUNER
8. TAPE
9. TV
DRIVER BIAS RECT
V3 B 6AV6
HIGH FREQ NOISE
DISTORTION FILTER
M5
M6
M8
DISTORTION FILTER SWITCH (M5) SHOWN IN "20KC" POSITION. SWITCH SEQUENCE:
1. 20KC
2. 12KC
3. 6KC
AF AMP
V2 B 12AX7
BASS 500K TAP @ 500K
TREBLE 500K TAP @ 500K
LOW FREQ BIAS RECT
V3 C 6AV6
LOW FREQ GATE
V5 12AU7
LOW FREQ NOISE 4000Ω
AF AMP
V7 A 12AX7
PHASE INV
V7 B 12AX7
OUTPUT
V8 EL34
OUTPUT
V9 EL34
100K AC BALANCE
DC BALANCE 50K
DC BALANCE TERMINALS
BIAS ADJUST
SPEAKER TERMINAL BOARD
SPKR #2
SPKR #1
SPEAKER SELECTOR
SPEAKER SELECTOR SWITCH (M9) SHOWN IN "SPEAKER #1" POSITION. SWITCH SEQUENCE:
1. SPEAKER #1
2. SPEAKERS #1 & #2
3. SPEAKER #2
SW ON LOUDNESS CONTROL
AC RECEPTACLE
2 1/2 AMP. 125V
RECT
V10 5U4GA
RED 380VAC
RED-YEL
RED 380VAC
HUM ADJUST 500Ω
NEON LAMP
435V SOURCE
350V SOURCE
285V SOURCE
260V SOURCE
250V SOURCE
-51V SOURCE
RED-YEL
T1
T2

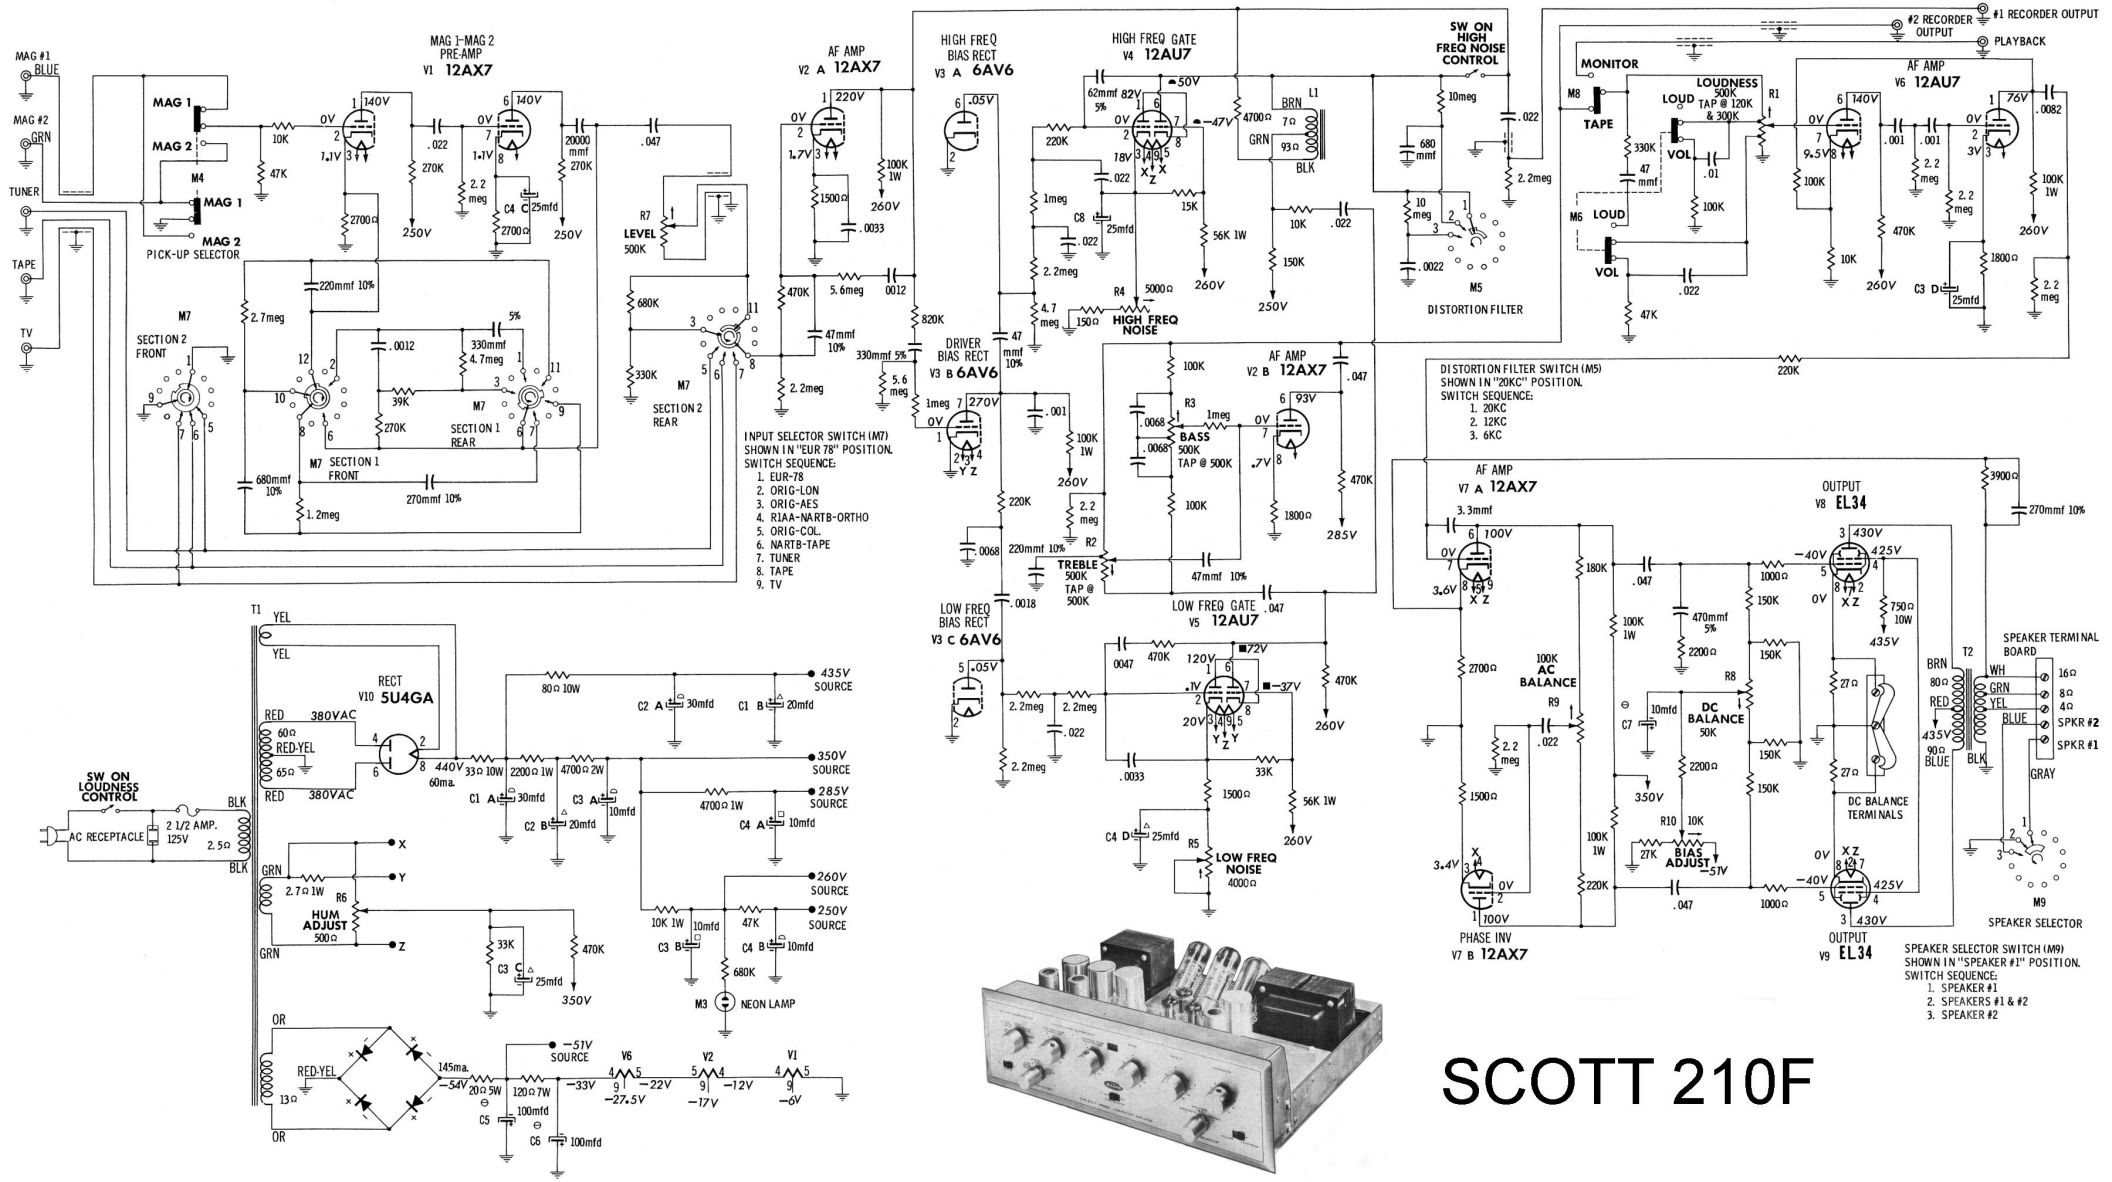

# SCOTT 210F