


ALIGNMENT Pilot 200 Stereo Alignment Instructions

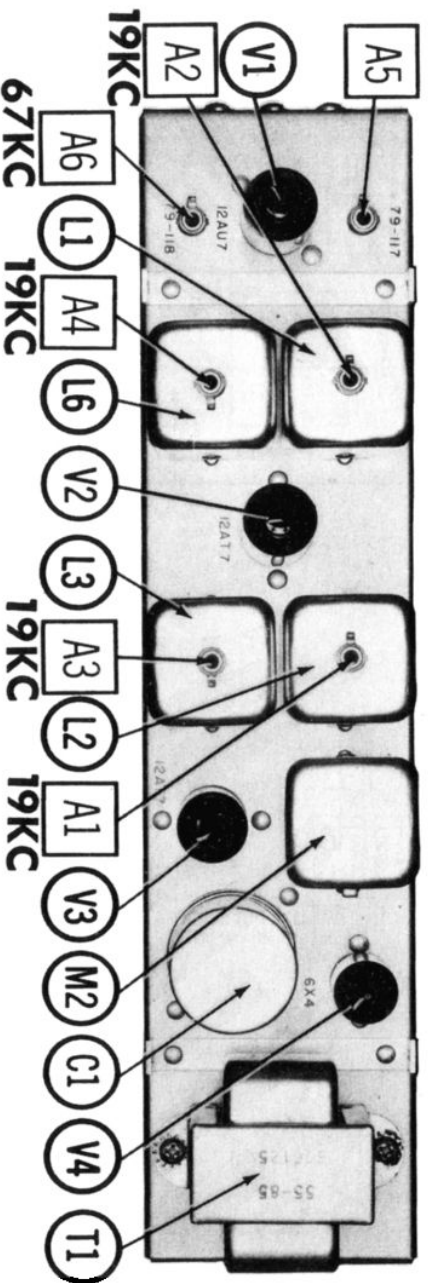

SIGNAL GENERATOR	INDICATOR	ADJUST	REMARKS
Inject 19KC signal + .01% to high side of multiplex input jack, low side to chassis.	Vert. input of scope to point A , low side to chassis.	A1, A2	Adjust for maximum deflection. Adjust scope sweep range to lock in 2 cycles.
"	Vert. input to point B , low side to chassis.	A3, A4	Adjust for maximum deflection of 4 cycle waveform.
Disconnect high side of L5 from point C . Inject 67KC signal from audio oscillator into high side of L5, low side to chassis.	Vert. input to high side of L5, low side to chassis.	A5	Adjust for MINIMUM deflection.
Reconnect L5. Inject 67KC signal from audio oscillator into multiplex input, low side to chassis.	Vert. input to point C , low side to chassis.	A6	Adjust for MINIMUM deflection.