


Voltages are to cathodes

Marconi Model 154

Marconi Model 154

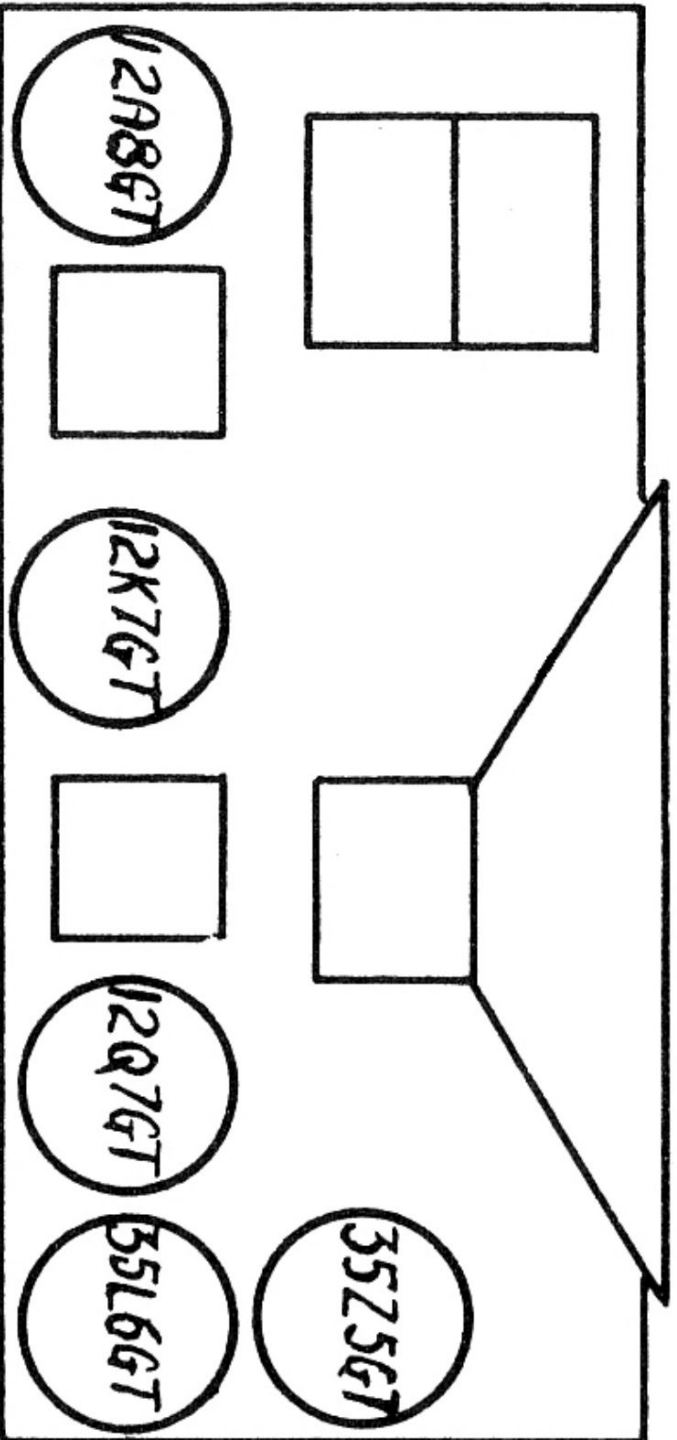

Connect S.G. Output to	Input Frequency	Receiver Dial Setting	Adjust	Trimmer Function	Remarks
CG 12A8GT	462.5	Max.	C9, C8, C7 & C6	IF Trimmer	Max. Output
Ant. Lead	1640 Kc.	Extreme right hand side	C4	Osc. Trimmer	Adjust for Resonance
Ant. Lead	1400 Kc.	Approx. 140	C3	RF Trimmer	Max. Output

Connect ground lead to chassis through 0.1 Mfd. 400 V. Capacitor. Check setting of dial pointer before proceeding with alignment. Pointer should be set over last division on left hand side of dial, with gang at maximum capacity (Plates fully meshed). Connect SG to grid through 0.1 mfd. 400 V. Capacitor.