
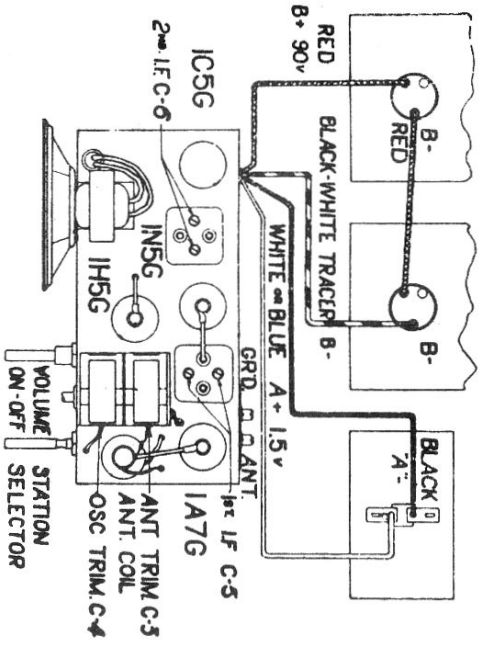


Phonola - Electrohome Battery Operated Radio

1B41-E, 1B41-P-1,
1B41-P-2, 1B41-P-3,
1B41-S, 1B41-S-1,1B41-M

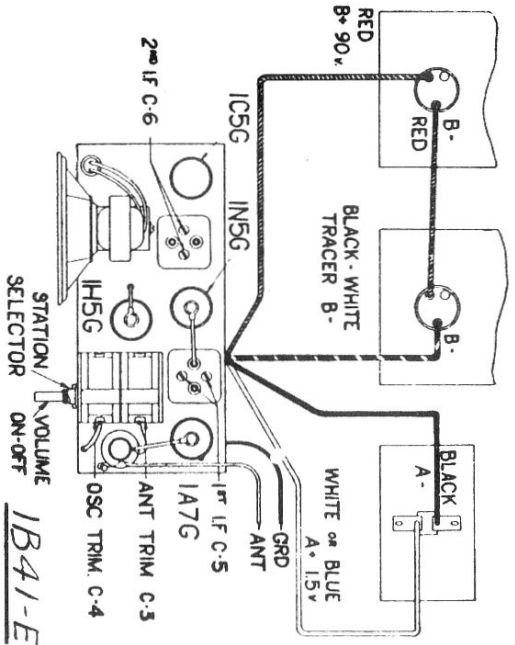

ALIGNMENT—PROCEED IN SEQUENCE LISTED.

| Band | Band Switch Setting | Dummy Antenna | Connect Generator To | Radio Dial Setting | Generator Frequency | Trimmer Adjusted | Adjustment |
|-----------|---------------------|---------------|----------------------------|--------------------|---------------------|------------------|----------------|
| 2nd I.F. | B.C. | .1 Mfd. | Grid of I.N.5.G. I.F. Tube | 1460 K.C. | 455 K.C. | 2nd I.F. C-6 | Maximum Output |
| 1st I.F. | B.C. | .1 Mfd. | Grid of I.A.7.G. Converter | 1460 K.C. | 455 K.C. | 1st I.F. C-5 | Maximum Output |
| 1460 K.C. | B.C. | 75 Mmfd. | Antenna | 1460 K.C. | 1460 K.C. | B.C. Osc. Ant. | Maximum Output |
| 600 K.C. | B.C. | 75 Mmfd. | Antenna | 600 K.C. | 600 K.C. | Check Only | Maximum Output |

