


Model 101-106 A.C. Receivers

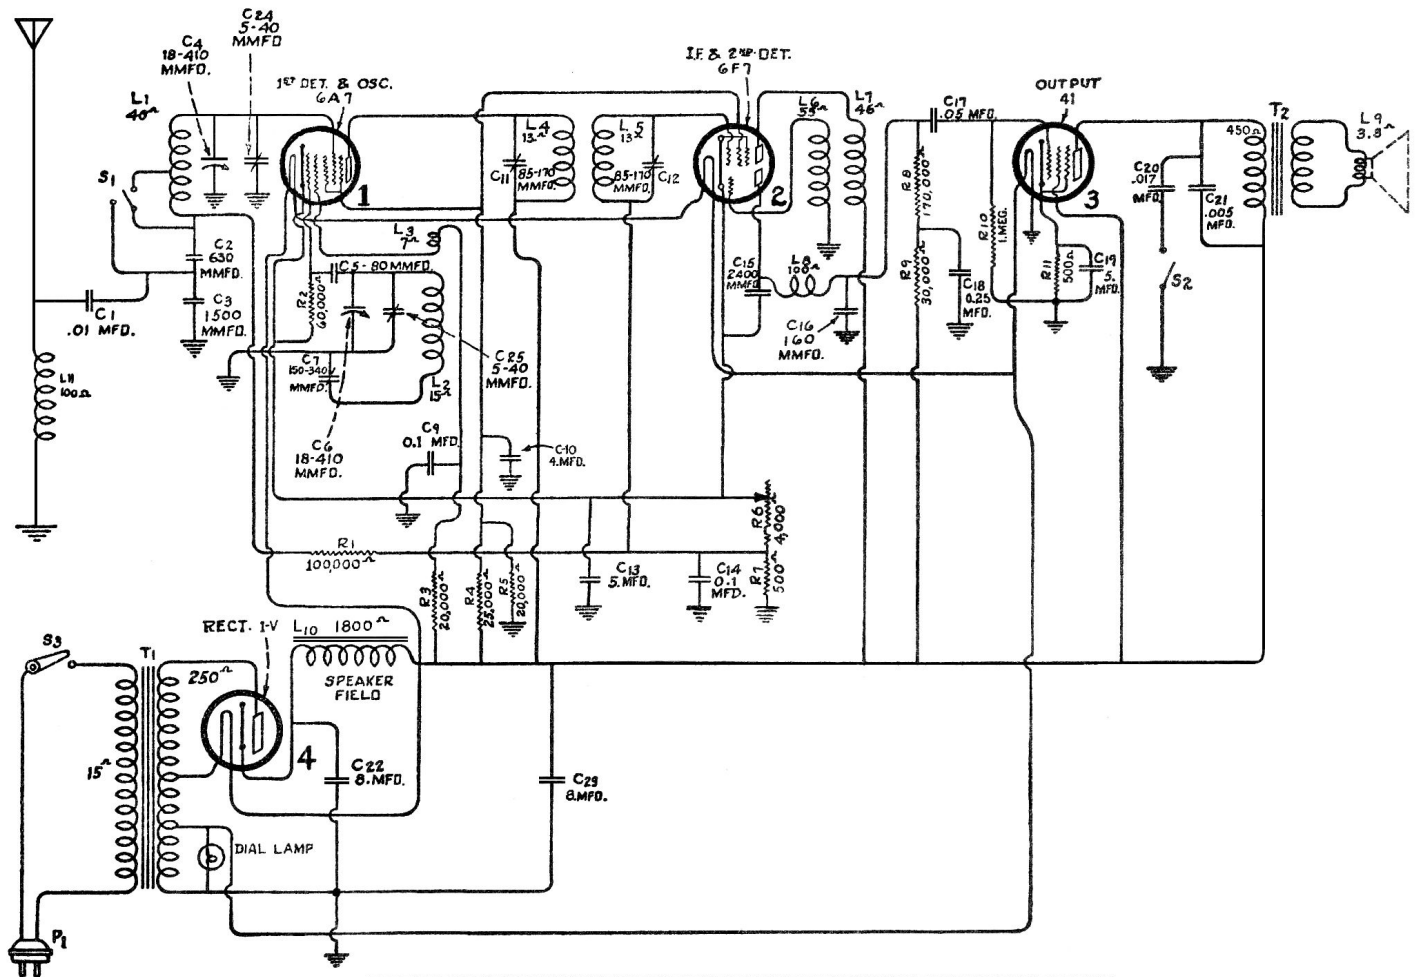

ALIGNMENT PROCEDURE

R.F. Stage 1400 K.C.
 Oscillator 600 K.C., 1400 K.C.
 Intermediate Frequency 460 K.C.
 Align all stages for maximum peak.

REPLACEMENT PARTS — MODEL 101

Insist on genuine factory tested parts, which are readily identified and may be purchased from authorized dealers.

Key No.	Stock No.	DESCRIPTION	Key No.	Stock No.	DESCRIPTION
RECEIVER ASSEMBLIES					
R-7	S-1151	Socket—6 Contact Tube Socket.	R-3	4085	Knob—Volume Control or Range Switch Knob—
R-1	S-1293	Resistor—1,500 ohms—Carbon Type—1/2 Watt.	R-5	4086	Knob—Tone Control Knob.
R-10	S-1354	Resistor—100,000 ohms—Carbon Type—1/4 Watt.		4104	Shield—Tube Shield.
C-9	S-1365	Resistor—1 megohm—Carbon Type—1/2 Watt.		6114	Resistor—20,000 ohms—Carbon Type—1 Watt.
	S-1371	Capacitor—0.1 mfd. Capacitor		6300	Socket—4 Contact Tube Socket.
R-9	2747	Contact Cap—		6660	Condenser—2 Gang Tuning Condenser.
C-5	3077	Resistor—30,000 ohms—Carbon Type—1/2 Watt.		6661	Capacitor Pack—Comprising two 5.0 mfd. and two 3.0 mfd. capacitors.
	3459	Capacitor—80 mmfd.		6662	Transformer—First Intermediate Frequency Transformer.
	3572	Socket—7 Contact Tube Socket.		6663	Transformer—Second Intermediate Frequency Transformer.
C-18	3584	Ring—Oscillator Coil Retaining Ring—		6664	Coil—Oscillator Coil.
R-2	3597	Capacitor—25 mfd. capacitor.		6665	Shield—Oscillator Coil Shield & Mounting Bracket
R-11	3602	Resistor—60,000 ohms—Carbon Type—1/2 Watt.		6666	Coil—Antenna Coil.
C-1	3632	Resistor—500 ohms—Carbon Type—1 Watt.		6667	Volume Control.
C-17	3701	Capacitor—.01 mfd. capacitor.	R-6	6668	Switch—Range Switch.
L-8	3713	Capacitor—.05 mfd. capacitor.	S-1	6669	Switch—Tone Control Switch.
	3857	Coil—Detector Choke Coil.	C-20	6787	Capacitor—Comprising one .005 mfd. and one .017 mfd. capacitors.
	3858	Socket—Dial Lamp Socket and Bracket.	C-21	7641	Capacitor—4.0 mfd.
	3862	Screw—Chassis mounting screw and washer —	C-10	9465	Transformer—Power Transformer 105-125 Volts 25 and 60 Cycles.
C-16	3865	Capacitor—160 mmfd.	T-1		
R-8	3869	Resistor—170,000 ohms—Carbon Type—1/2 Watt	REPRODUCER ASSEMBLIES		
C-14	3877	Capacitor—0.1 mfd. capacitor.	T-2	6788	Transformer—Output Transformer.
	3886	Reflector—Dial Light Reflector.		8987	Cone—Reproducer Cone.
	3887	Dial—Station Selector Dial—		9437	Coil Assembly—Comprising Field Coil, Magnet and Cone Support, less Output Transformer.
R-4	3889	Resistor—25,000 ohms—Carbon Type—3 Watt.		9467	Reproducer—Complete.
C-15	3932	Capacitor—2,400 mmfd.			
C-2	3933	Capacitor—630 mmfd.			
C-7	4000	Capacitor—Adjustable Capacitor.			
L-11	4018	Coil—Choke Coil.			
	4075	Knob—Station Selector Knob			