

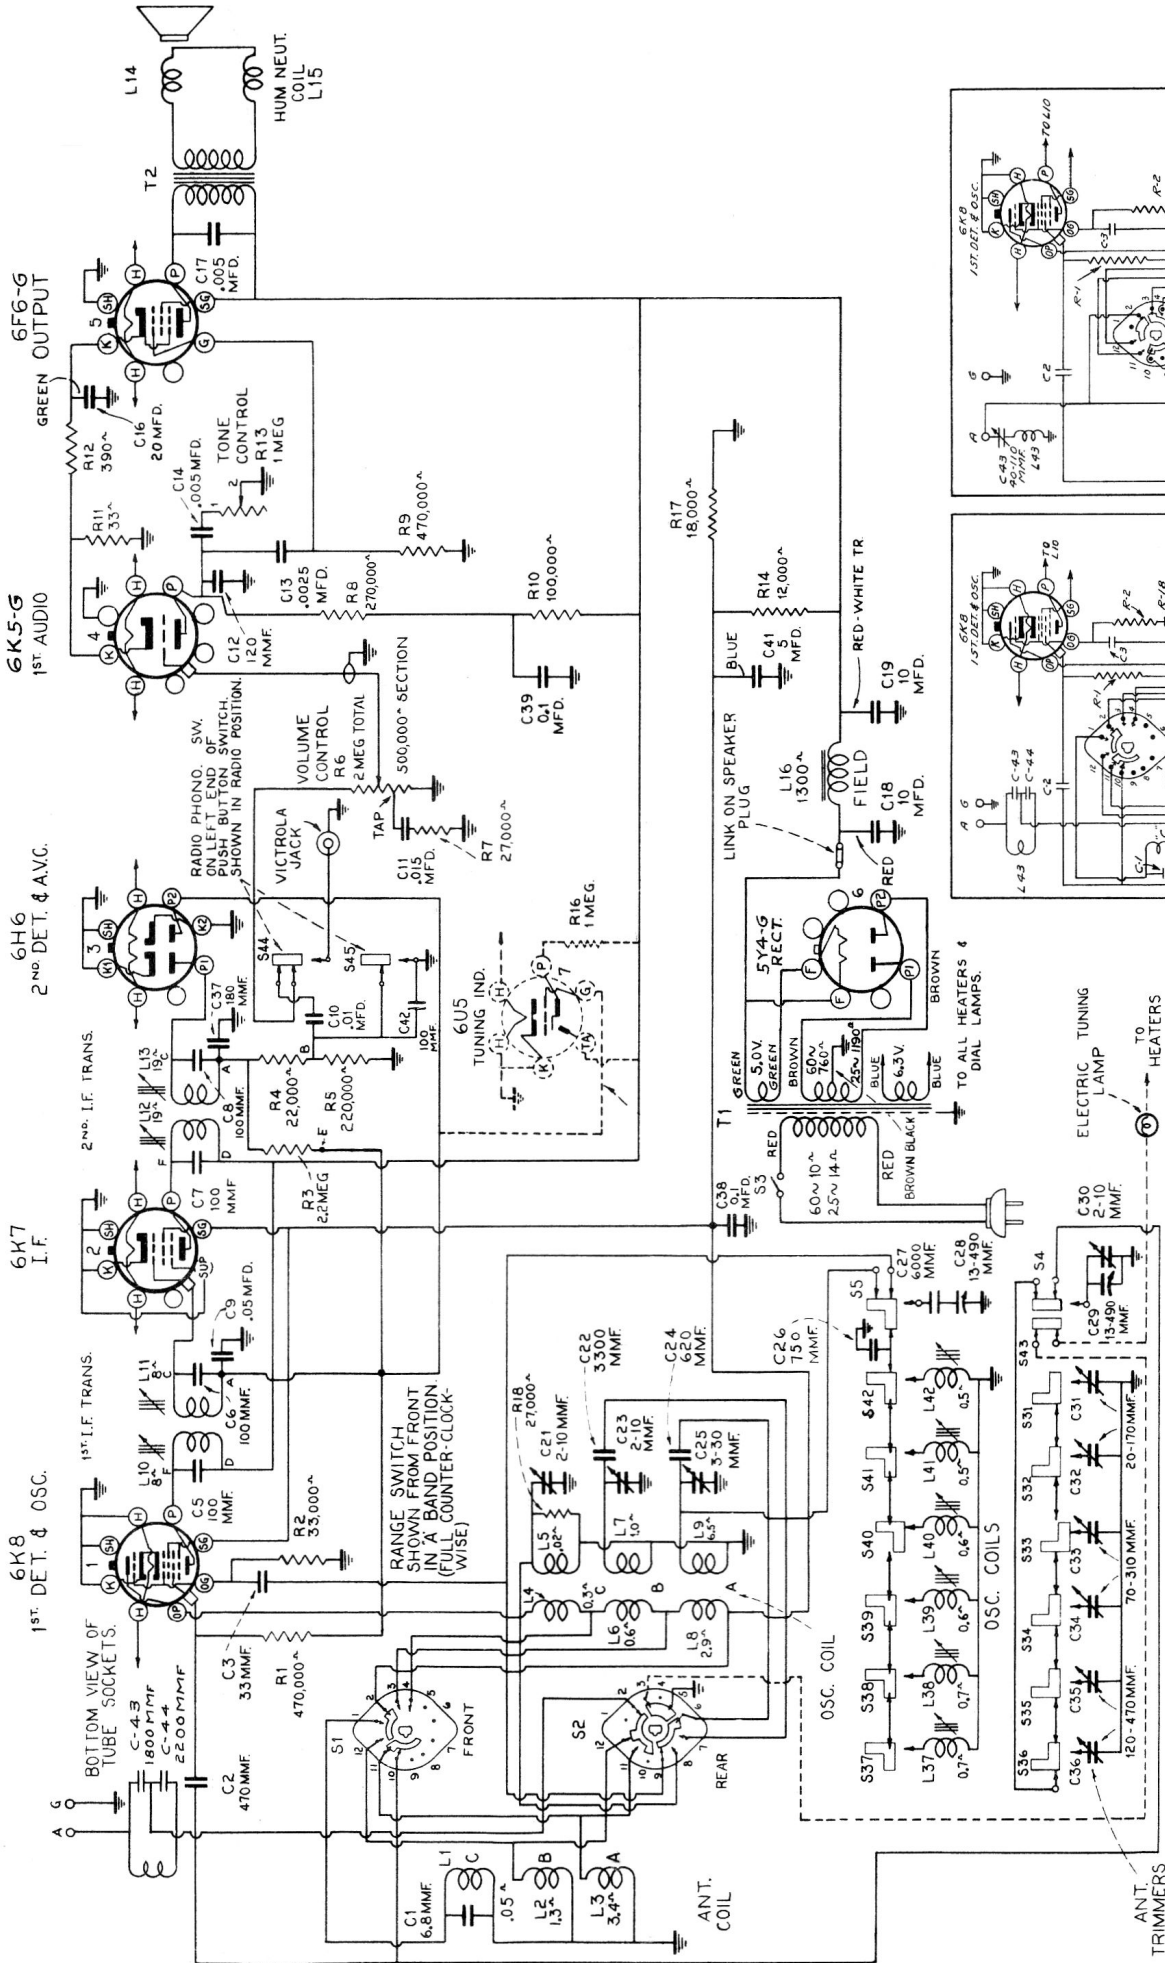


Models 96T, 96K, 97T1, 97K1, 97E, 97KG A.C. Receivers

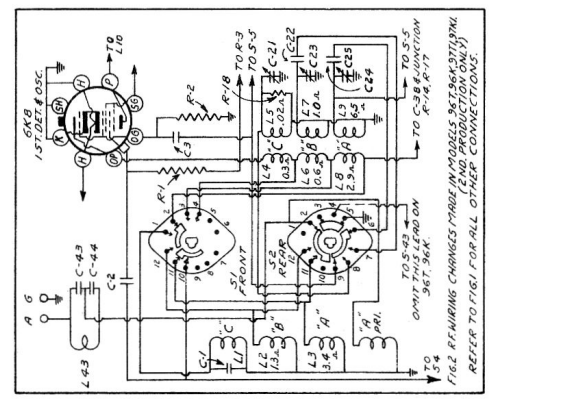

Alignment Procedure

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap. in series with .01 mid.	455 kc	"A" band, Quiet Point	L12 and L13 (2nd I-F Trans.)
2	6K8 det. grid cap. in series with .01 mid.	455 kc	between 550-750 kc	L10 and L11 (1st I-F Trans.)
3	Antenna Terminal, in series with 400 ohms	20 mc	20 mc (23°) "C" band	C21* (osc.) C30** (ant.)
4	Antenna Terminal, in series with 400 ohms	6.1 mc	6.1 mc (31°) "B" band	C23 (osc.)†
5	Antenna Terminal, in series with 200 ohms.	1,500 kc	1,500 kc (28½°) "A" band	C25 (osc.)

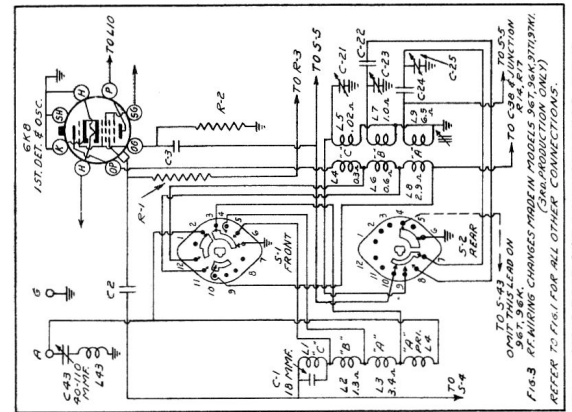

NOTE:—AVC TRAP C-43, L-43 USED ON 97E ONLY.

NOTE:—AVC TRAP C-43, L-43 USED ON 97E ONLY.