


RCA Victorphone

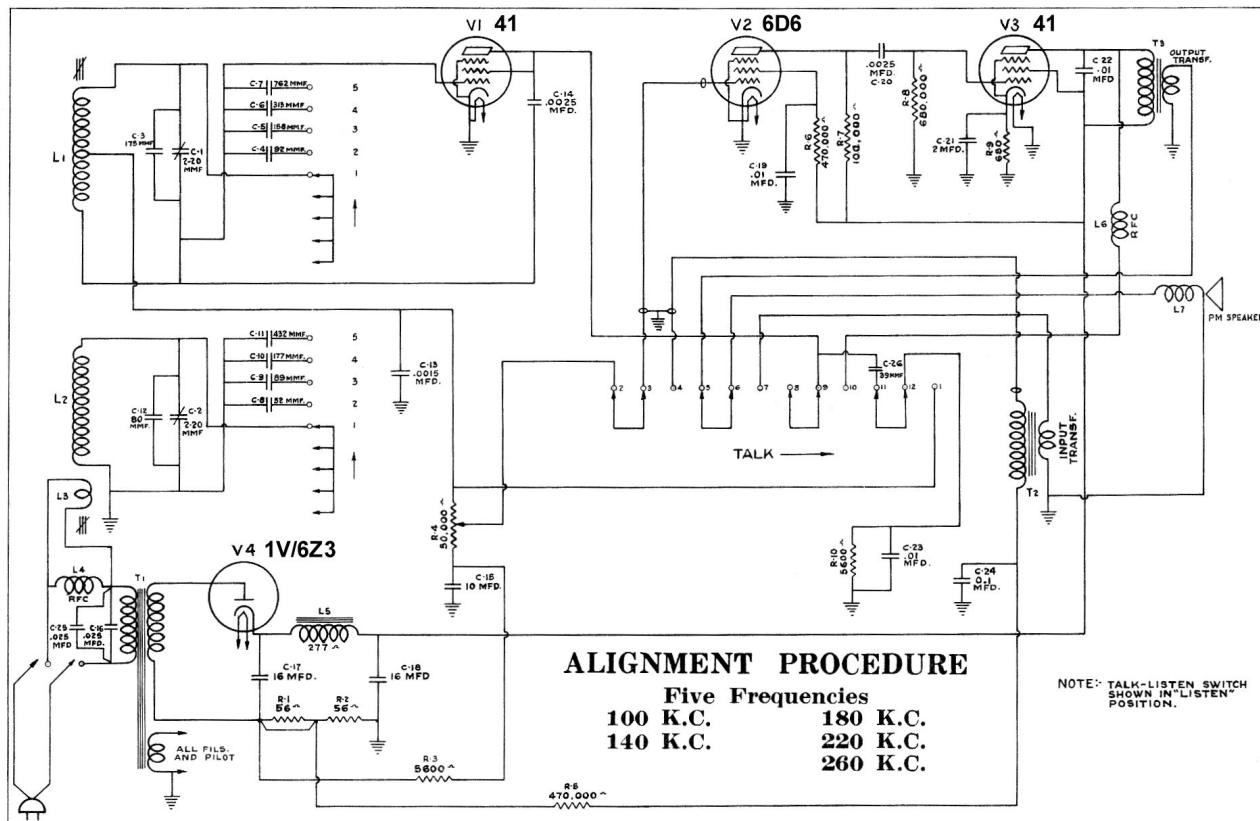

REPLACEMENT PARTS — Victorphone

Insist on genuine factory tested parts, which are readily identified and may be purchased from authorized dealers.

STOCK NO.	DESCRIPTION	STOCK NO.	DESCRIPTION	
RECEIVER ASSEMBLIES				
S-1875	Cable-Shielded cable & grid clip assembly—approximately 9" long.....	5226	Lamp-Pilot Lamp-Reactor-Filter reactor (L5).....	
12118	Cap-Grid contact cap.....	S-1903	Resistor-56 ohms, insulated, $\frac{1}{2}$ watt (R1,R2).....	
S-1876	Capacitor-Adjustable dual trimmer (C1,C2).....	S-1892	Resistor-680 ohms, insulated, $\frac{1}{2}$ watt (R9).....	
S-1877	Capacitor-39 Mmfd. (C26).....	S-1893	Resistor-5600 ohms, insulated, $\frac{1}{2}$ watt (R10).....	
S-1878	Capacitor-52 Mmfd. (C8).....	S-1894	Resistor-5600 ohms, insulated, $\frac{1}{4}$ watt (R3).....	
S-1879	Capacitor-80 Mmfd. (C12).....	S-1895	Resistor-100,000 ohms, insulated, $\frac{1}{4}$ watt (R7).....	
S-1880	Capacitor-89 Mmfd. (C9).....	12285	Resistor-470,000 ohms, insulated, $\frac{1}{4}$ watt (R5,R6).....	
S-1881	Capacitor-92 Mmfd. (C4).....	S-1896	Resistor-680,000 ohms, insulated, $\frac{1}{4}$ watt (R8).....	
S-1882	Capacitor-158 Mmfd. (C5).....	3858	Socket-Pilot lamp socket.....	
S-1883	Capacitor-175 Mmfd. (C3).....	S-1905	Switch-Range switch.....	
S-1884	Capacitor-177 Mmfd. (C10).....	S-1906	Switch-Listen-Talk switch.....	
S-1885	Capacitor-313 Mmfd. (C6).....	S-1891	Shield-Type 6D6 radiotron shield.....	
S-1886	Capacitor-432 Mmfd. (C11).....	12218	Shield-Type 41 radiotron shield.....	
S-1887	Capacitor-762 Mmfd. (C7).....	12581	Shield-Tuning coil shield top.....	
13140	Capacitor-1500 Mmfd. (C13).....	S-1897	Transformer-Input and output transformer assembly (T2,T3).....	
3932	Capacitor-.0025 Mfd. (C14).....	S-1898	Transformer-Power transformer, 105-125 volt, 60 cycle (T1).....	
5107	Capacitor-.0025 Mfd. (C20).....	S-1899	Transformer-Power transformer, 105-125 volt, 25 cycle (T1).....	
13138	Capacitor-.01 Mfd. (C19).....	S-1904	Volume control and "ON-OFF" switch (R4).....	
4858	Capacitor-.01 Mfd. (C22).....	REPRODUCER ASSEMBLIES		
4883	Capacitor-.01 Mfd. (C23).....	S-1907	Cone-Reproducer cone.....	
4839	Capacitor - 0.1 Mfd. (C24).....	S-1908	Reproducer, complete.....	
S-1889	Capacitor-2 Mfd. (C21).....			
S-1890	Capacitor-10 Mfd. (C15).....			
5212	Capacitor-16 Mfd. (C17).....			
14377	Capacitor-16 Mfd. (C18).....			
S-1900	Coil-Tuning coil (L1,L2,L3,C3,C12).....			
S-1901	Coil-Line coupling assembly(L4,C25,C16).....			
6321	Coil-Choke coil(L6).....			
12006	Core-Core and stud assembly for tuning coil.....			
S-1797	Indicator Jewel (Brown).....			
S-1910	Knobs-Range switch knob.....			
S-1909	Knobs-Talk-Listen switch knob.....			
S-1911	Knobs-Volume control knob.....			