



DIAL LIGHTS

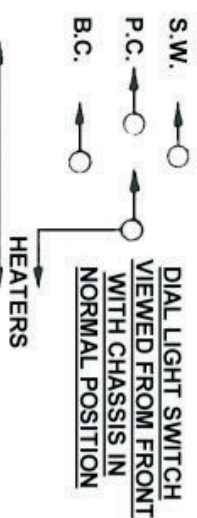

**Rogers Model 11/68, 11/69 Chassis 6R631
Rogers Model 11/60, 11/65, 11/66 Chassis 6R632**

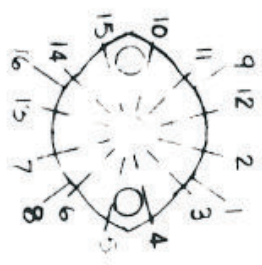

S1 A B C D

**CHASSIS UPSIDE DOWN
VIEWED FROM REAR**

Item #	RESISTORS Name or Part No.	Part No.	CONDENSERS Name or Capacitance	Part No.
--------	-------------------------------	----------	-----------------------------------	----------

Item #	RESISTORS Name or Part No.	Part No.	CONDENSERS Name or Capacitance	Part No.
Variable Resistors				
R1	500,000 Ohm V.C.	12852	370 mmf. Gang) Used-6R631	13181
R2	50,000 Ohm T.C.	12853	370 mmf. Gang) 6R631	13181
Graphite Resistors				
R3	2 Megohm	33302	370 mmf. Gang) All-632's	13249
R4	500,000 Ohm	33303		
R5	20,000 Ohm	40523		
R6	50,000 Ohm	33301		
R7	500,000 Ohm	33303		
R8	50,000 Ohm	33301		
R9	25,000 Ohm	40539		
R10	5,000 Ohm	40540		
R11	1 Megohm	33306		
R12	500,000 Ohm	33303		
R13	1 Megohm	33306		
R14	500,000 Ohm	33303		
R15	100,000 Ohm	33304		
R16	75,000 Ohm	40544		


Item #	RESISTORS Name or Part No.	Part No.	CONDENSERS Name or Capacitance	Part No.
Variable Mica				
C1	Ant. S.W.P. Pad.	13139		
C2	Ant. P.C.P. Pad.	13139		
C3	Ant. B.C.P. Pad.	13139		
C4	Parallel Pad	On C8		
C5	Osc. S.W.P. Pad.	4036		
C6	Osc. S.W.P. Pad.	13140		
C7	Osc. P.C.P. Pad.	13140		
C8	Osc. B.C.P. Pad.	13140		
C9	1st I.F. Pad.	In 1st I.F. Trans.		
C10	2nd I.F. Pad.	Assy. 5182		
C11	1st I.F. Pad.	In 2nd I.F. Trans.		
C12	2nd I.F. Pad.	In 2nd I.F. Trans.		
C13	2nd I.F. Pad.	Assy. 5183		
C14	Neutralizing	Wire Leads		
C15				
C16				
C17				
Mica				
C30	1,000 mmf.	34125		
C31	200 mmf.	37905		
C32	200 mmf.	37905		
C33	200 mmf.	37905		
C34	200 mmf.	37905		
C35	4,000 mmf.	34124		
C36	1,720 mmf.	34123		
C37	200 mmf.	37905		
C38	200 mmf.	37905		

Item #	Name	Part No.
T1	Wave Trap	5180
T2	S.W. Int. Trans.	5232
T3	P.C. Ant. Trans.	5176
T4	B.C. Ant. Trans.	5230
T5	S.W. Ant. Trans.	5229
T6	S.W. Osc. Coil	5178
T7	P.C. Osc. Coil	5179
T8	B.C. Osc. Coil	5178
T9	1st I.F. Trans.	5182
T10	2nd I.F. Trans.	5183
T11	Power Trans.	5184
T12	Output Trans.	On Speaker
T13	Speaker	5256-Mantel 5300-Console

Item #	Name	Part No.
S1	SWITCHES, ETC. Band Switch	13143
S2	Line Switch	On Tone Control
BC1	Bias Cell	13109
BC2	Bias Cell	13109

Item #	Name	Part No.
Variable Mica		
C18	0.1 mf. 200 V.	38106
C19	0.1 mf. 200 V.	38106
C20	0.1 mf. 400 V.	38121
C21	0.03 mf. 400 V.	38112
C22	0.03 mf. 400 V.	38112
C23	0.005 mf. 400 V.	38110
C24	0.05 mf. 600 V.	38111
C25	0.25 mf. 200 V.	38107
C26	0.03 mf. 400 V.	38112

Item #	Name	Part No.
Tubular		
C18	0.1 mf. 200 V.	38106
C19	0.1 mf. 200 V.	38106
C20	0.1 mf. 400 V.	38121
C21	0.03 mf. 400 V.	38112
C22	0.03 mf. 400 V.	38112
C23	0.005 mf. 400 V.	38110
C24	0.05 mf. 600 V.	38111
C25	0.25 mf. 200 V.	38107
C26	0.03 mf. 400 V.	38112

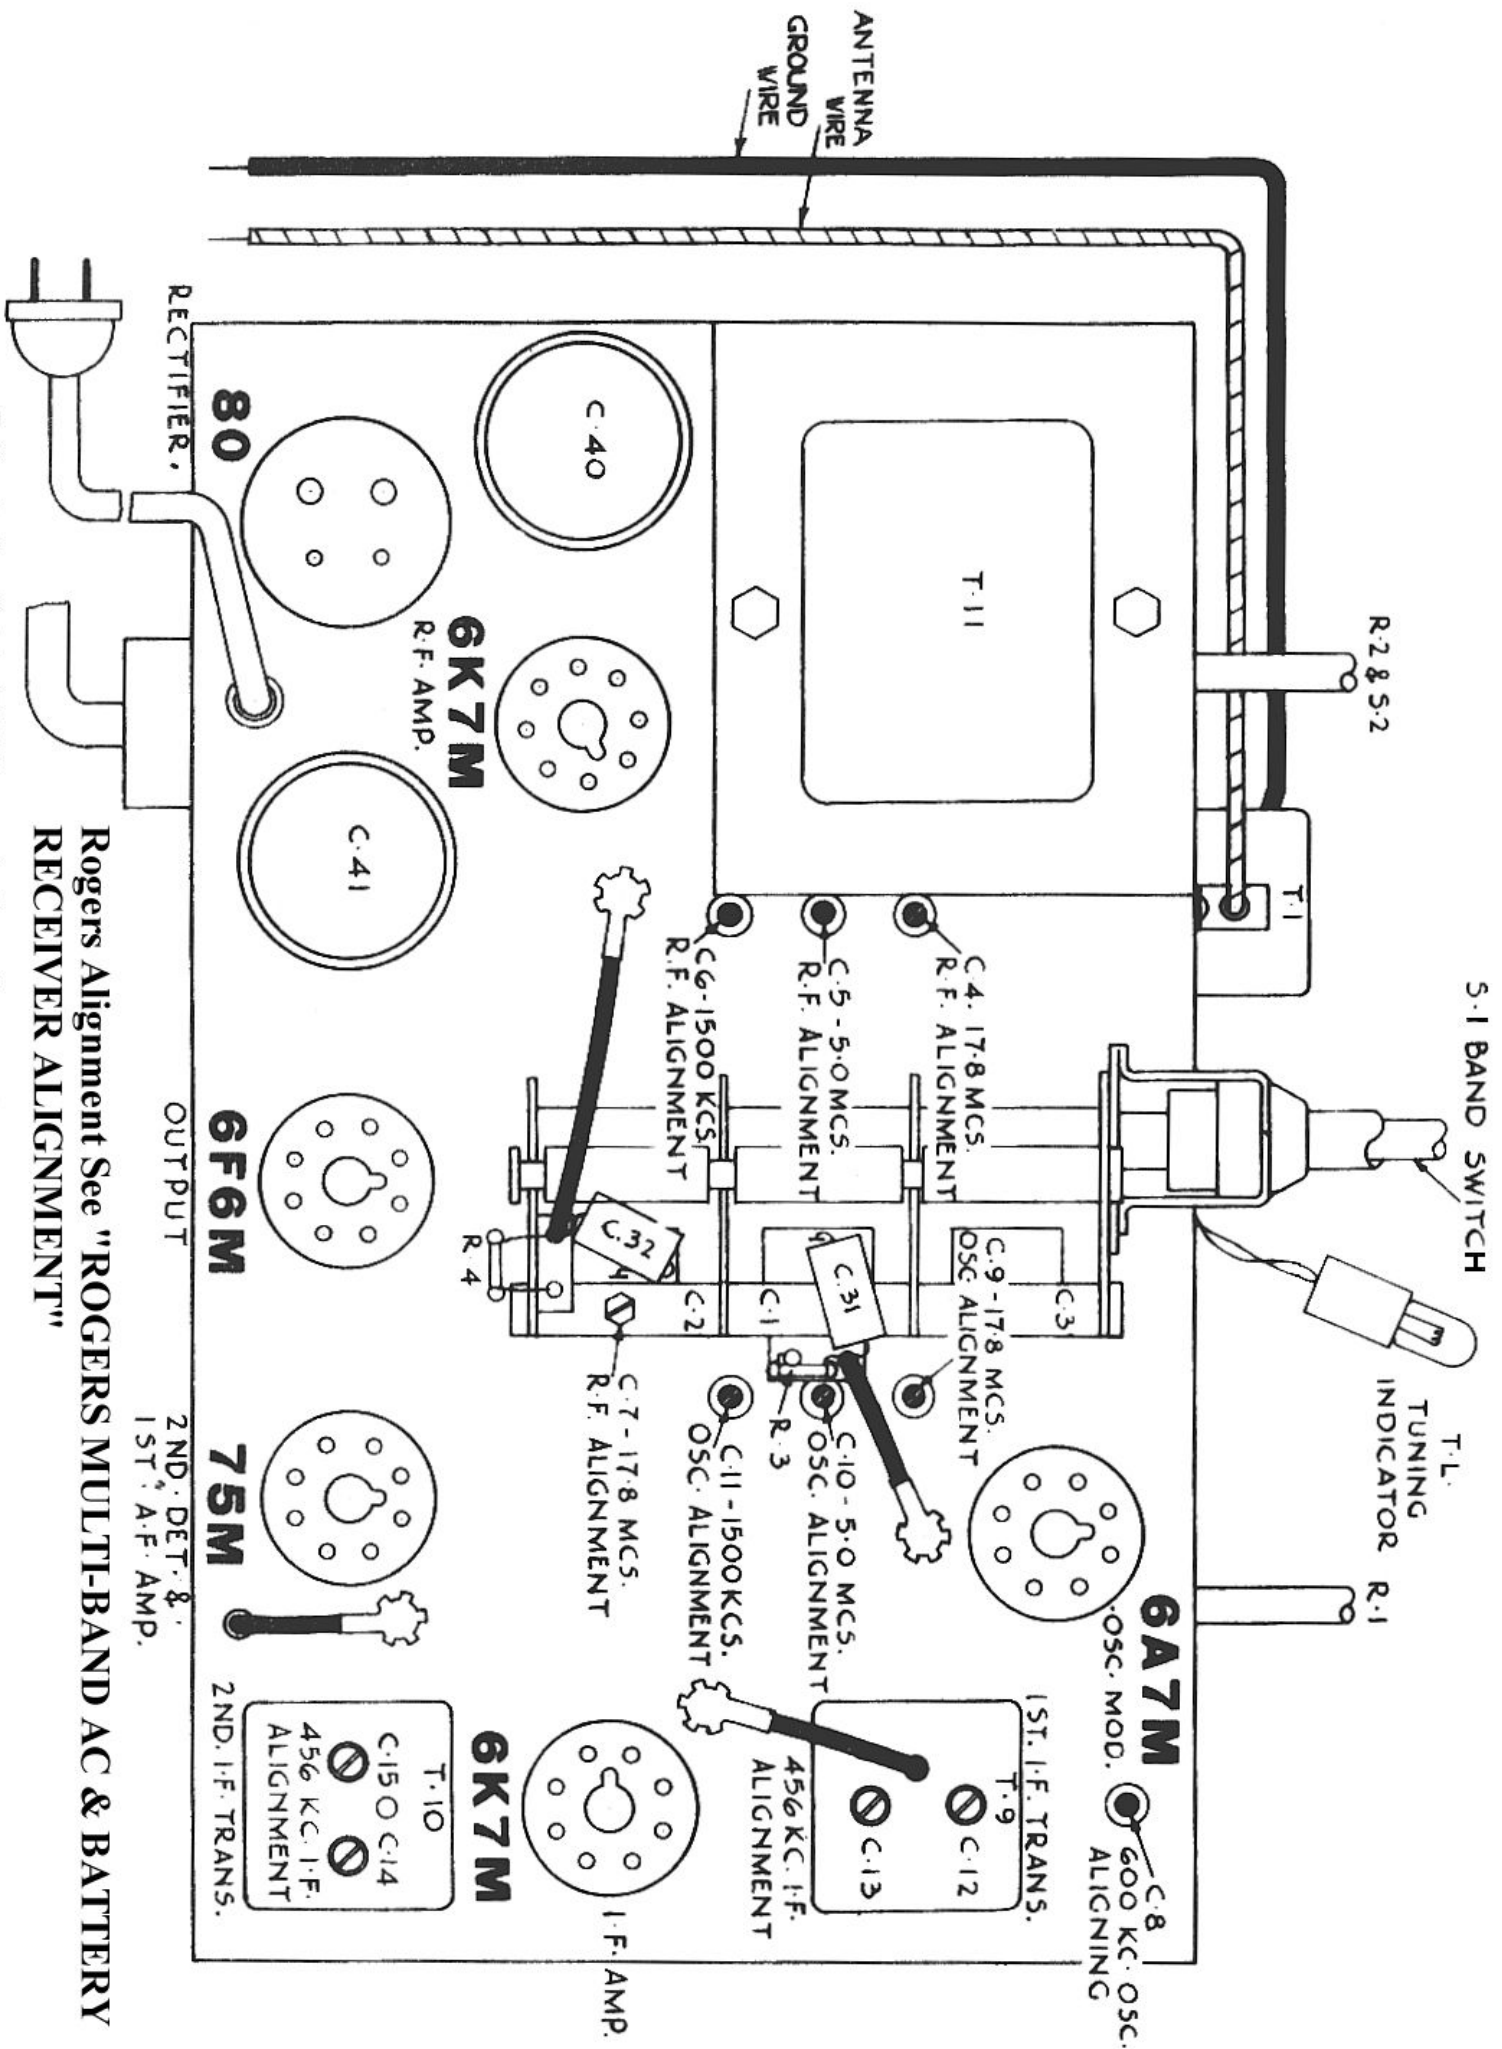

Models "11/68" and "11/69"-Type 6R631 Chassis
 Models "11/60", "11/65" and "11/66"-Type 6R632 Chassis

Rogers Alignment See "ROGERS MULTI-BAND AC & BATTERY RECEIVER ALIGNMENT"