


Rogers 15-53
Majestic 41-53
De Forest "Ensign"

Chassis Models 10R511, 10M511, 10D511

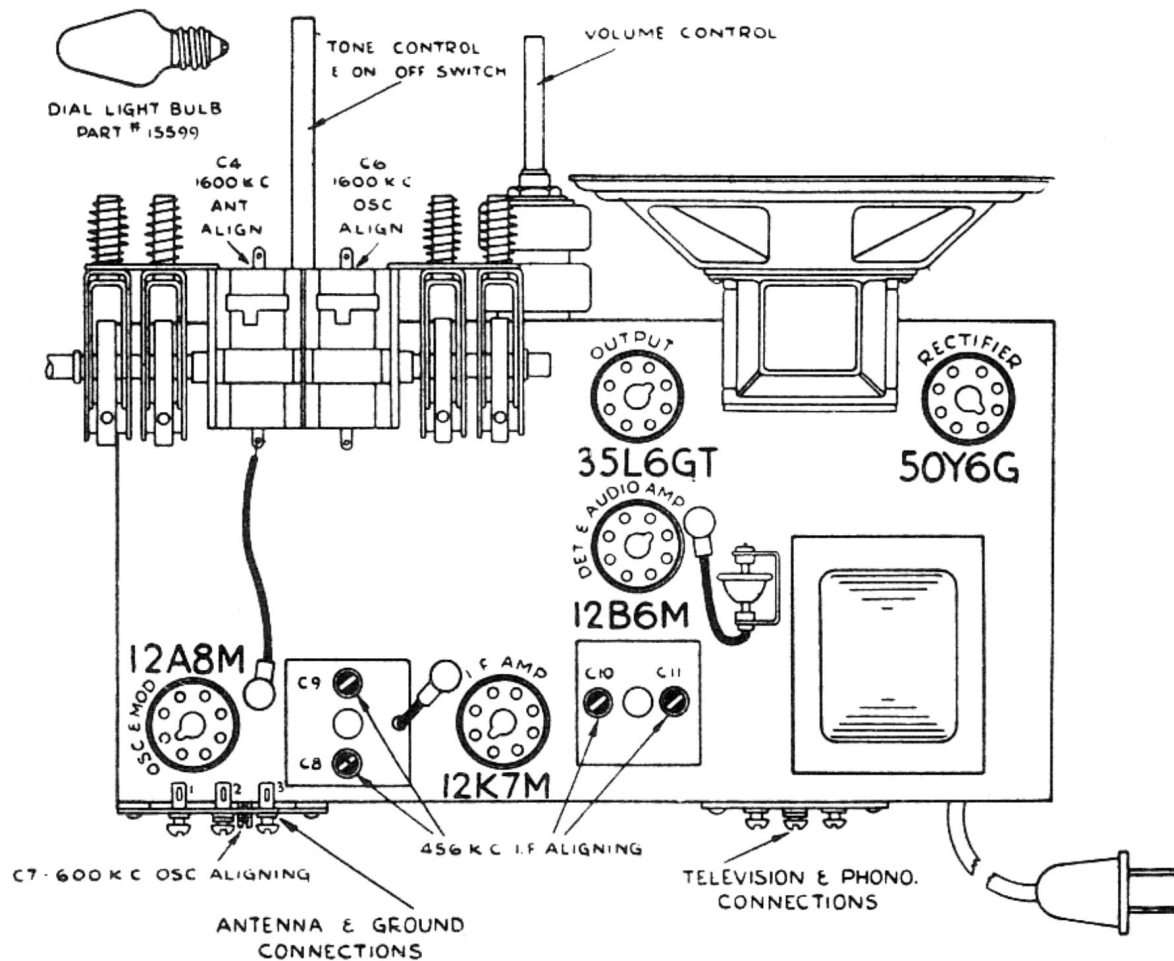

Alignment Instructions For Chassis 511

- I. F.—Short out oscillator section of gang condenser. Connect generator through a .1 mfd. condenser to control grid of 12A8M tube (grid cap in position). With generator at 456 kcs. adjust I. F. trimmers C11, C10, C9 and C8 in that order, for maximum output.
- R. F.—Remove shorting link from gang condenser. Apply 1600 kc. signal through a .0002 mfd. condenser to antenna (Green) lead or terminal "A". Adjust C6 (oscillator) and C4 (R. F.) for maximum reading. Reset generator to 600 kcs. and adjust C7 for maximum reading. Rock gang during this operation.

**Rogers 15-53 Majestic 41-53
De Forest "Ensign"**

Chassis Models 10R511, 10M511, 10D511