

# Viking 46-31

(Chassis EU1-4516)

Electrohme 103, 104

(Chassis PU1-4516)

Serenader 502


(Chassis SU1-4516)

Lindsay 80


(Chassis LU1-4516)

Dictator 6105M

(Chassis DU1 4516)

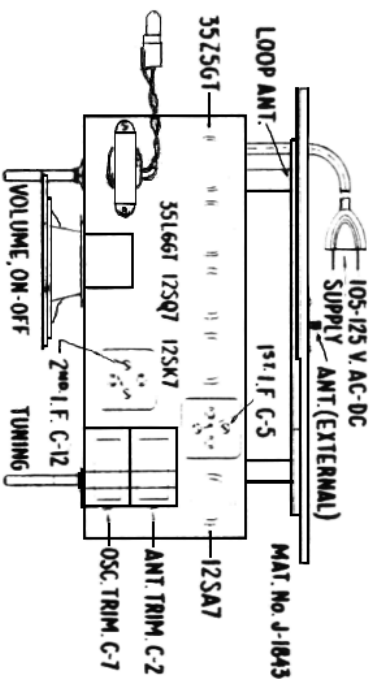

## SERENADER-DICTATOR-LINDSAY

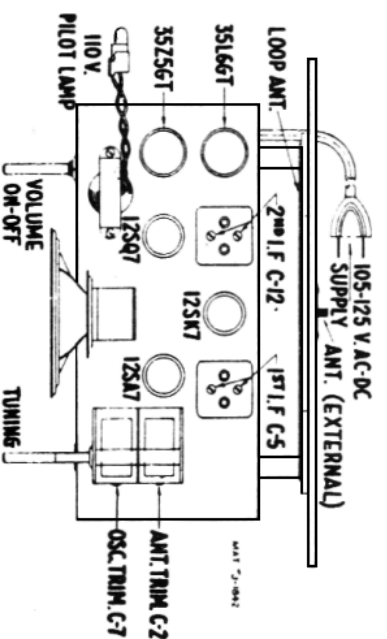

## ELECTROHOME - VIKING

### ALIGNMENT—PROCEED IN SEQUENCE LISTED

Band	Dummy Antenna	Connect Generator To	Radio Dial Setting	Generator Frequency	Trimmer Adjusted	Adjustment
1st I.F.	.05 Mfd.	Grid of 12SK7 Tube	1650 K.C.	455 K.C.	2nd I.F. C-12	Maximum Output
Converter Grid	.05 Mfd.	Grid of 12SA7 Converter	1650 K.C.	455 K.C.	1st I.F. C-5	Maximum Output
B.C.	400 ohms.	Ant.	1460 K.C.	1460 K.C.	B.C. Osc. C-7 B.C. Ant. C-2	Maximum Output
B.C.	400 ohms.	Ant.	600 K.C.	600 K.C.		