


- R10 75 Ω
- R11 1420 Ω
- R12 450 Ω
- R13 1420 Ω
- R14 670 Ω
- R17 SERIES
- R18 40 Ω ONLY

Phonola - Electrohome Series 40 & 40A

Tube	Circuit	110 V.	120 V.
R. F. '35	Screen-Grid Plate	85 175	92 191
1st Det '35	Screen-Grid Plate	85 175	92 191
I. F. '35	Screen-Grid Plate	85 175	92 191
Oscillat '27	Plate	85	92
2nd Det 24	Screen-Grid Plate	80 141	87 148
A. V. C '24	Grid Screen-Grid	17 28	18.5 30
Audio '47	Accelerating-Grid Plate	244 210	267 230

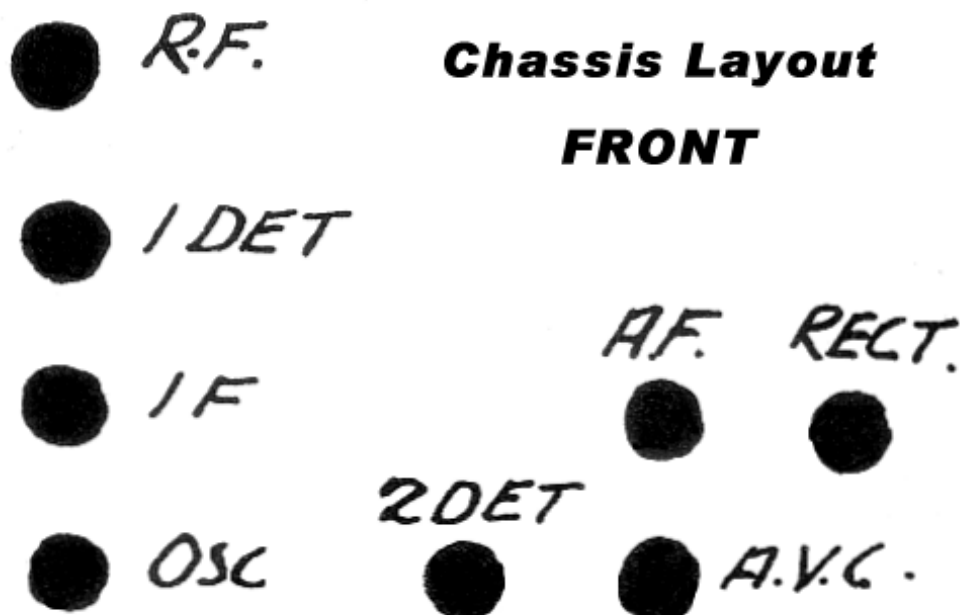

Grimes Radio Ltd.

Grimes Phonola - Electrohome

Series 40 & 40A