
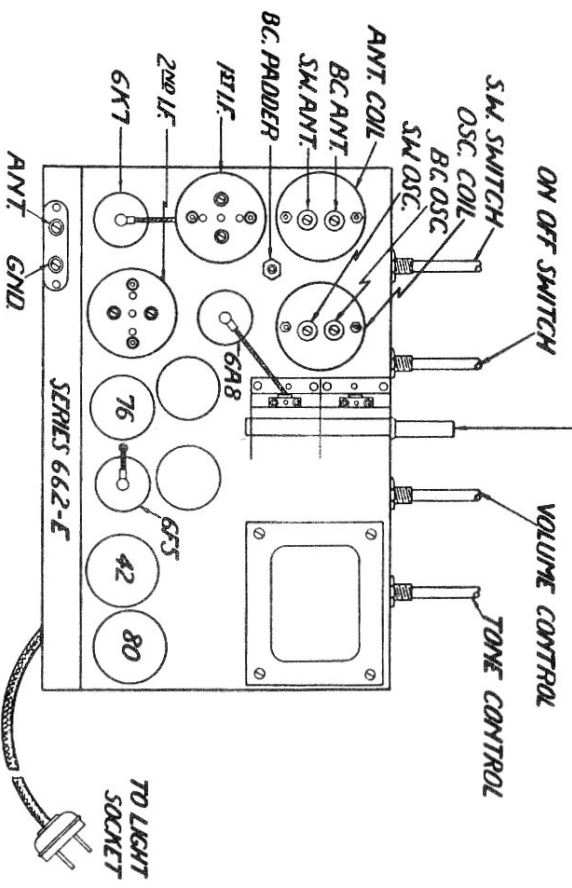


BEFORE SWITCHING ON RECEIVER FIRST ASCERTAIN THAT ALL TUBES HAVE BEEN PLACED IN THEIR RESPECTIVE SOCKETS. DO NOT CONNECT RECEIVER TO LINE WITHOUT THE LOUD SPEAKER BEING CONNECTED.

WINDING POLARITY "S" DESIGNATES START OF WINDING "F" DESIGNATES FINISH OF WINDING

115 VOLTS - 25 - 60 HZ

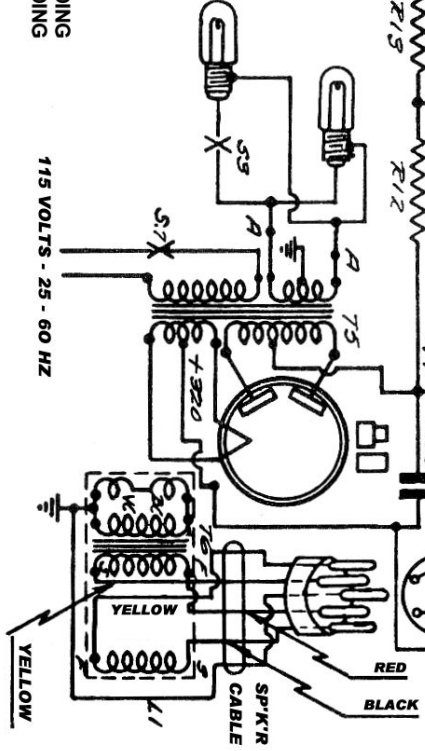

Phonola - Electrohome Series 662-E

Electrohome Series

662-E

Note: There may be two signals present, use the one obtained by minimum capacity setting of the trimming condenser and adjust it to its peak. The antenna trimming condenser is then adjusted for maximum output.

I. F. ALIGNMENT

Set the signal generator to 456 K.C. and connect the output to the grid cap of the 6A8 tube through a .1 Mfd. condenser. The generator ground is connected to the chassis ground post or frame, which must be externally grounded. The receiver dial is set to its highest frequency (gang open) and the volume control turned full on.

The I. F. trimmers located as shown on the tube layout chart are then adjusted by means of a non-metallic screw driver until maximum output is obtained.

R. F. ALIGNMENT

Broadcast Band 1500 K.C. The signal generator is set to 1500 K.C. and connected to the antenna post of the receiver through a .00025 Mfd. condenser. The generator ground lead and chassis frame must be connected and externally grounded.

With the receiver dial set at 1500 K.C. and volume full on, adjust the oscillator trimming condenser until a signal is heard.

600 K. C. The signal generator and the receiver dial are then set to 600 K.C. The 600 K.C. padding condenser, located as shown on the tube layout chart, is adjusted for maximum output. While making this adjustment, rock the tuning control back and forth through the signal until maximum output results. Following this, it is advisable to repeat the procedure outlined for 1500 K.C., in order to compensate for any slight discrepancy caused by the adjustment of the series padding condenser.

Short Wave Band

15 M.C. Set the signal generator to 15 M. C. and connect its output to the antenna post of the receiver through a 400 ohm resistor. The ground of the signal generator is connected to the chassis frame or ground post and externally grounded. Switch the receiver to short wave band, set the receiver dial to 15 M.C. and turn the volume control full on.

Adjust the short wave oscillator trimming condenser, shown on the tube layout chart, until a signal is heard. **Note:** There may be two signals present, use the one obtained by the minimum capacity setting and adjust the trimming condenser to the peak of the signal. Then adjust the short wave antenna trimming condenser for maximum output.