



STATIC BALANCING
 1) CONNECT A MOVING COIL VOLTMETER (0-10V_{ac})
 ACROSS POINTS A + C.
 ADJUST R₂ FOR ZERO READING.
 NOTE
 VOLTAGE MEASUREMENTS TAKEN AT
 117 VOLTS 25 CYCLES WITH A 20,000 Ω
 PER VOLT VOLTMETER.

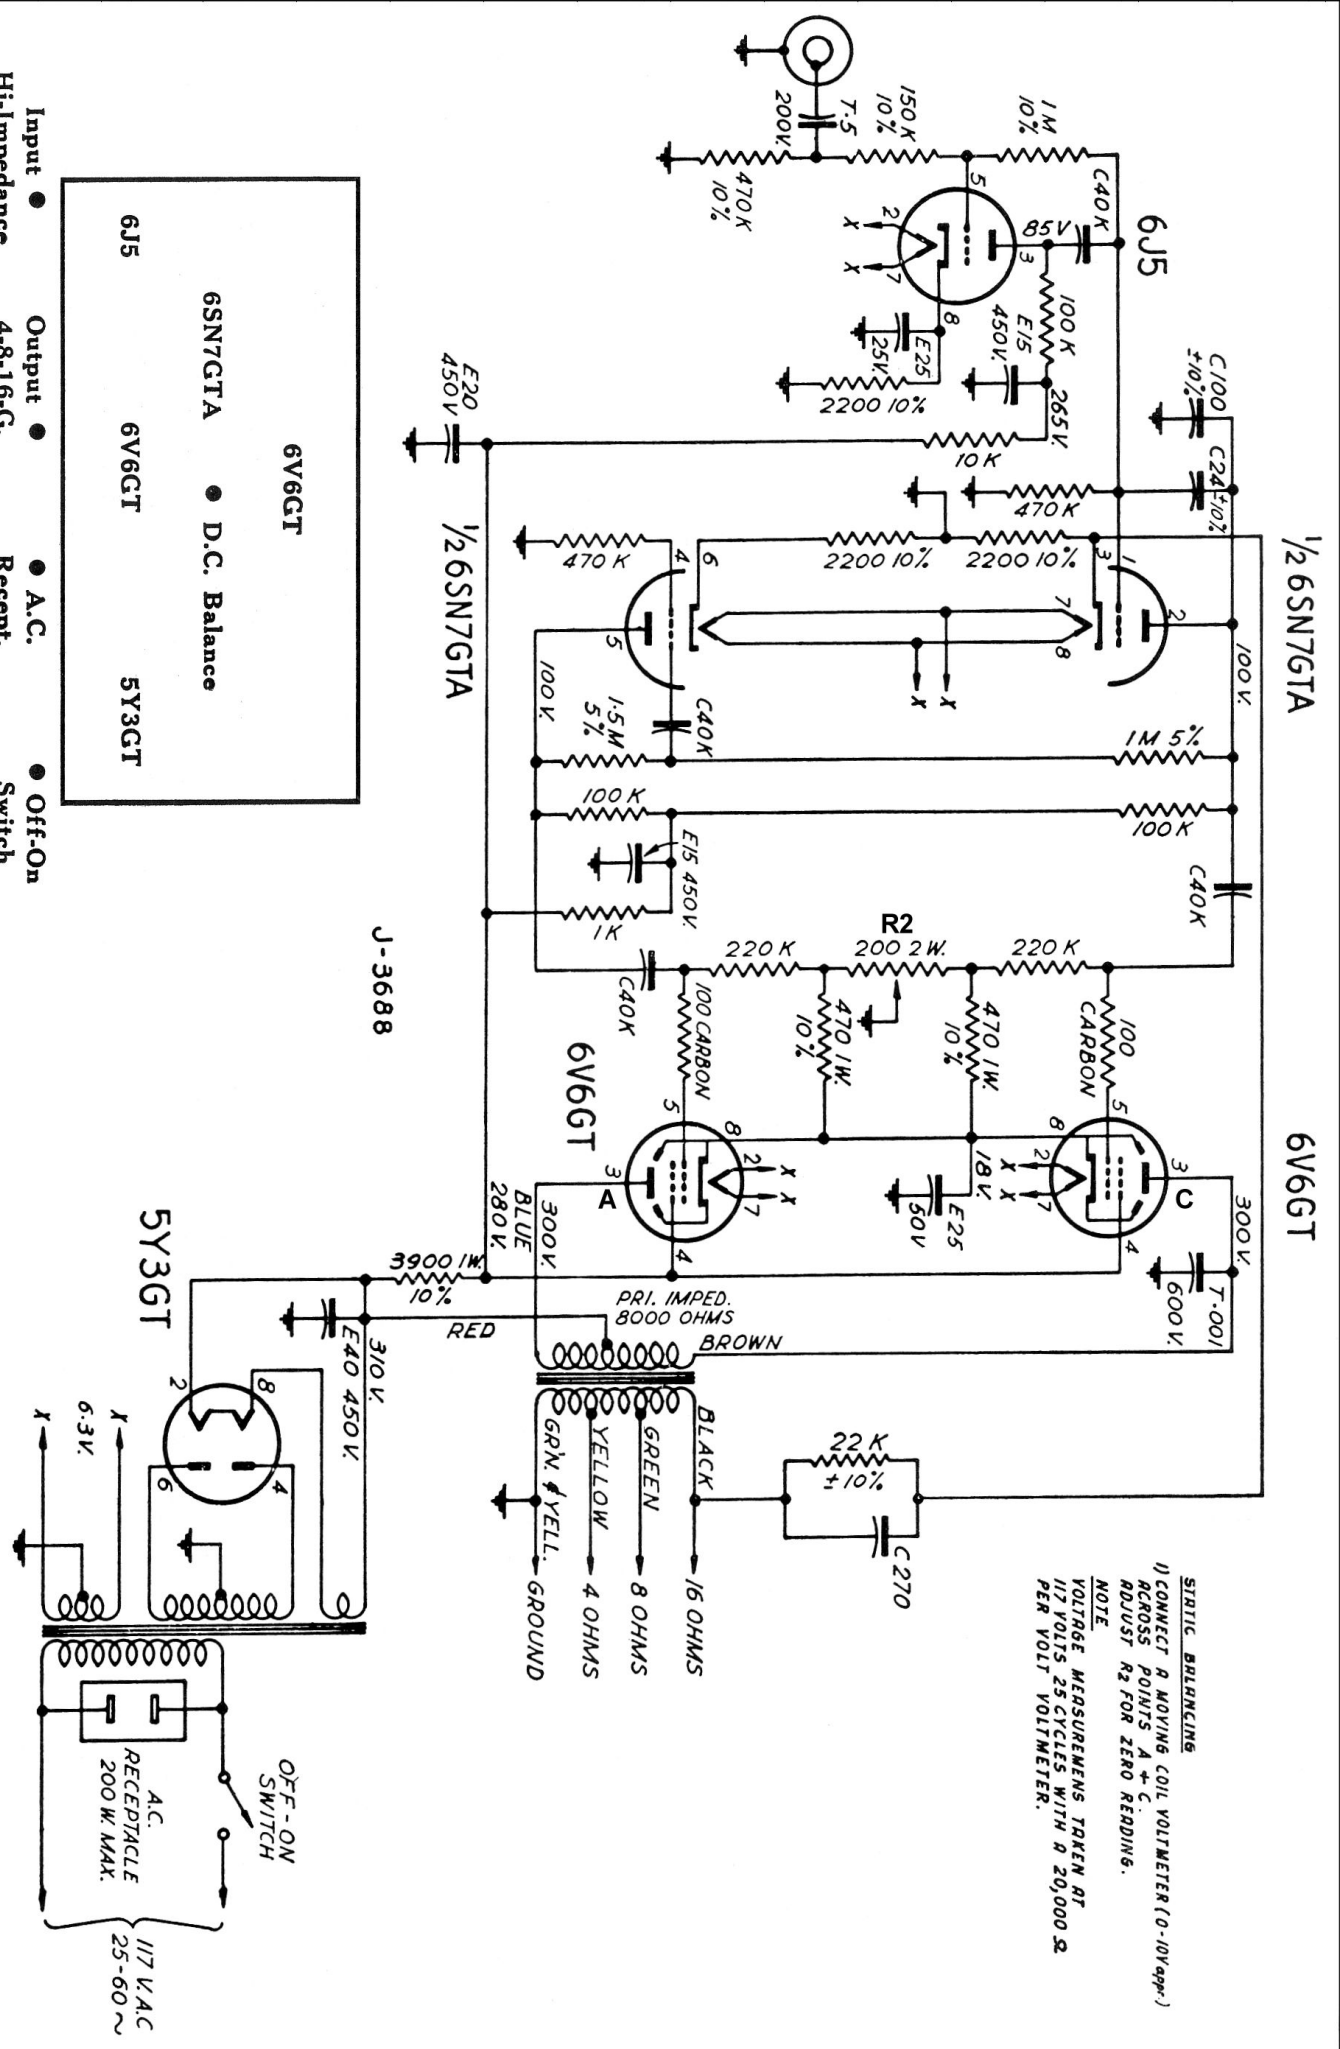

Electrohome PA-400 Power Amplifier

- Input ● Hi-Impedance
- Output ● 4-8-16-G.
- A.C. Recept.
- Off-On Switch

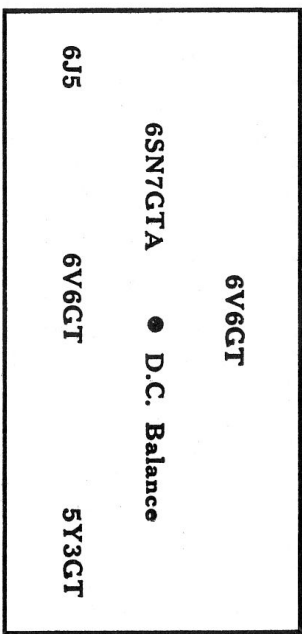

J-3688

