INSTALLATION OF THE STARK 9-66 UNIVERSAL ADAPTER




The Stark 9-66 universal adapter is designed to replace European tube adapters EA, EB, EC, EG and EL42 listed in the Stark Additional Tube Data supplement.

Connect universal adapter lead colored;

RED (or WHITE/RED TRACER) to pin 1 of 9-66 octal socket BROWN to pin 2 of 9-66 octal socket ORANGE to pin 3 of 9-66 octal socket YELLOW to pin 4 of 9-66 octal socket GREEN to pin 5 of 9-66 octal socket BLUE to pin 6 of 9-66 octal socket GRAY to pin 7 of 9-66 octal socket PURPLE to pin 8 of 9-66 octal socket

WHITE to pin 9 of 9-66 Noval socket (9 pin miniature)

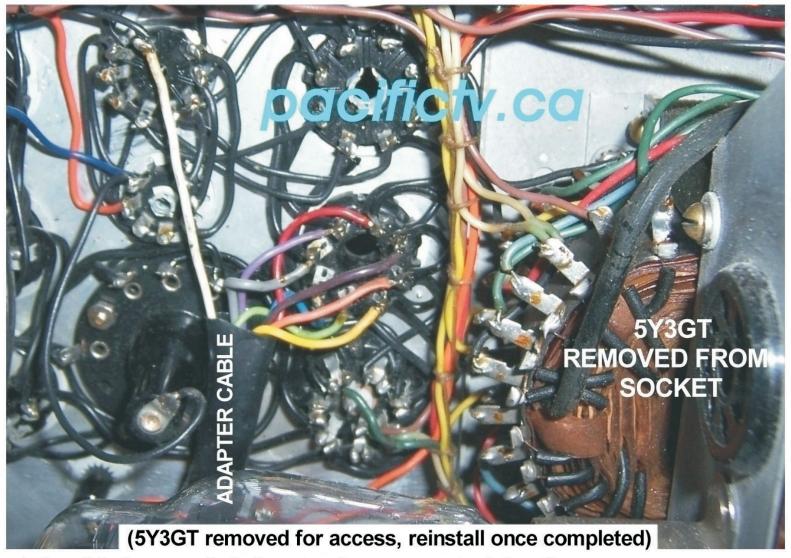

The Universal Adapter is mounted in the accessory compartment at the back of the Stark 9-66 (a piece of trim wood must be installed the length of the compartment to insure a proper fit). The AC power cord comes through the rubber grommet on the left of the of the Universal Adapter.

