


DIAL CALIBRATION

If the receiver should require calibration proceed as follows:

- (1) Disconnect the antenna lead from the ground and connect it to the output of the test oscillator through a dummy antenna. A 200 or 250 MMFD condenser will serve this purpose.
- (2) Turn the gang condenser to full mesh and check to see that the pointer lines up with the last line at the extreme left of the scale. If it does not, shift the pointer.
- (3) Adjust the test oscillator to 1400 KC and connect it to the set through the dummy antenna.
- (4) Turn the knob till the pointer indicates 1400 KC on the scale and adjust the trimmers on the gang for maximum output using the weakest input signal that will give a satisfactory reading on the output meter.

1938 - 39

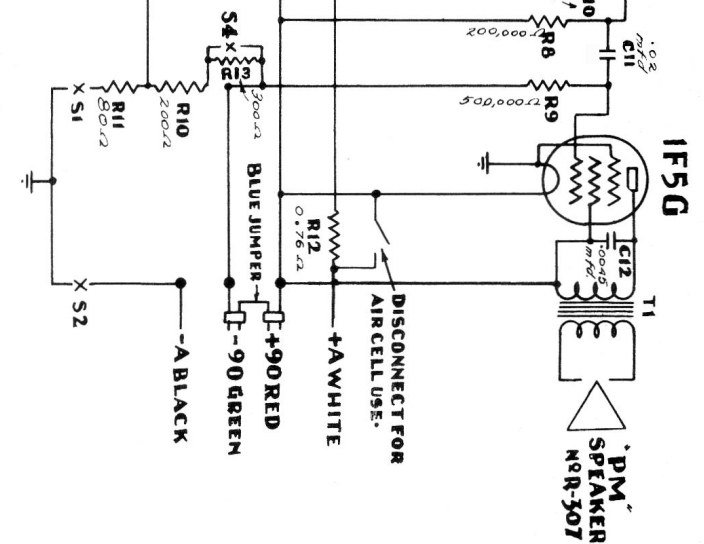

R. F. ALIGNMENT

- (1) Connect an output meter across the voice coil terminals of the speaker.
- (2) Turn the volume control to maximum and leave it at this setting throughout the whole alignment procedure. Ground the antenna lead to the chassis.
- (3) Adjust the test oscillator to exactly 456 KC and connect its output between the 1C7G control grid cap and the chassis. Use an .05 mfd. condenser in series with the lead if there is not already one in the oscillator itself.
- (4) Adjust the four I.F. trimmer condensers on top of the cans, beginning with the second stage which feeds the 1H6G for maximum output as indicated on the output meter.
- (5) Repeat section 4 as the adjustment of any one trimmer will have some effect on the remaining ones.


WAVE TRAP ADJUSTMENT

Remove the test oscillator lead from the 1C7G grid cap and connect it to the blue antenna wire of the chassis through a standard dummy antenna or alternatively a 200 MMFD. mica condenser. The ground lead of the oscillator should be connected to the chassis as before.

With a strong 456 KC signal input adjust the slotted screw of the wave trap coil at the end of the rear of the chassis with a small screw driver for minimum output. A very strong input signal is necessary for the final adjustment. The lock nut should always be tightened again after adjustment.

NOTE A: THIS GRID BIAS VOLTAGE IS (-) AND IS MEASURED ACROSS RESISTOR R11

NOTE B: THIS GRID BIAS VOLTAGE IS (-) AND IS MEASURED FROM THE (-) LEAD TO CHASSIS.

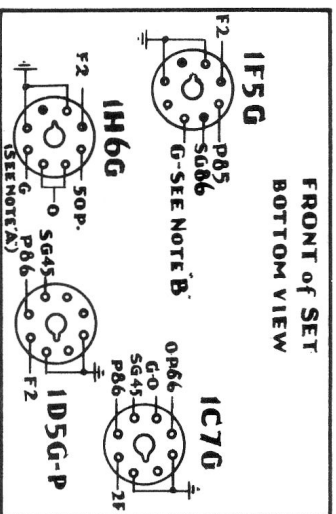

FRONT of SET

BOTTOM VIEW

ALL VOLTAGES MEASURED FROM TUBE SOCKETS TO CHASSIS WITH METER OF AT LEAST 1000 OHMS PERVOLT, EXCEPT AS OTHERWISE NOTED.